

**WALL-MOUNTED** STANDARD **INVERTER** Single-Split Type



CS-PU36WKQ



Wireless (Standard)


**POWERFUL** **INVERTER**

MODEL	INDOOR UNIT	[60Hz]	CS-PU36WKQ
	OUTDOOR UNIT		CU-PU36WKQ
Cooling Capacity	(min-max)	kW	10.0 (2.7-11.0)
	(min-max)	kJ/h	36,000 (9,720-39,600)
EER	(min-max)	kJ/hW	10.8 (17.1-10.6)
Electrical Data	Voltage	V	230
	Current	A	15.0
	Power Input (min-max)	W	3,330 (570-3,730)
Moisture Removal		L/h (Pt/h)	4.4 (9.4)
Air Circulation	Indoor	m <sup>3</sup> /min (ft <sup>3</sup> /min)	24.0 (847)
	Outdoor	m <sup>3</sup> /min (ft <sup>3</sup> /min)	82.2 (2,902)
Noise Level	Indoor (H / L / Q-Lo)	dB (A)	49/39
	Outdoor (H)	dB (A)	57
Unit Dimensions Indoor (Outdoor)	Height	mm	295 (955)
		inch	11-5/8 (37-5/8)
	Width	mm	1,160 (1,100)
		inch	45-11/16 (43-5/16)
	Depth	mm	255 (370)
		inch	10-1/16 (14-19/32)
Packaging Dimensions Indoor (Outdoor)	Height	mm	375 (1,018)
		inch	14-25/32 (40-3/32)
	Width	mm	1,250 (1,305)
		inch	49-7/32 (51-13/32)
	Depth	mm	331 (535)
		inch	13-1/16 (21-3/32)
Net Weight	Indoor / Outdoor	kg (lb)	14 (31) / 76 (168)
Gross Weight	Indoor / Outdoor	kg (lb)	20 (44) / 85 (187)
Refrigerant Pipe Diameter	Liquid Side	mm (inch)	ø 6.35 (1/4)
	Gas Side	mm (inch)	ø 15.88 (5/8)
Pipe Extension	Chargeless Pipe Length	m	10.0
	Maximum Pipe Length	m	30
	Maximum Elevation Length	m	20
	Additional Refrigerant Gas*	g/m	25
Power Supply			Outdoor

\*When pipes are not extended from the chargeless pipe length, the required amount of refrigerant is already in the unit.

**EASY-TO-USE REMOTE CONTROLLER**


Panasonic's wireless remote controller features a large Liquid Crystal Display (LCD) panel which makes it even more user-friendly. So you can sit back and enjoy easy operation and long-lasting comfort from your Panasonic Air Conditioner.

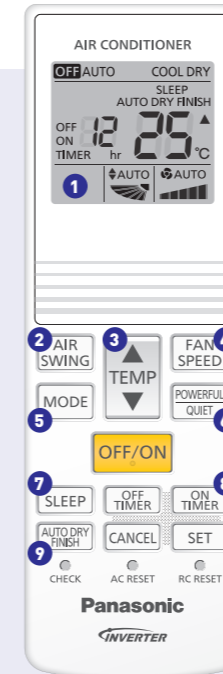

Wireless  
Applicable to STANDARD  
INVERTER

- 1 LCD display for an easy overview of the operation status.
- 2 Set the vertical airflow direction.
- 3 Press up or down to set the temperature.
- 4 Adjusts the fan speed.
- 5 Toggles between AUTO, COOL and DRY setting mode.
- 6 Toggles setting between POWERFUL mode and Quiet mode. Press POWERFUL mode when you want to cool down the room quickly while Quiet mode allow you to quiet down the unit.
- 7 Press the SLEEP button to control temperature and fan speed for better sleep.
- 8 Set the ON & OFF Timer in 12-hour range in 1 hour increment.
- 9 Press the AUTO DRY FINISH button when you want to dry the air conditioner indoor unit.

**TO SET POWERFUL/QUIET MODE**



**POWERFUL**

• Used when you want to cool down the room quickly.

- 1 Press the **POWERFUL/QUIET** button once to activate the "POWERFUL" mode. The "POWERFUL" indicator on the indoor unit is illuminated (Red).

**QUIET**

• Used when you want to quiet down the unit.

- 1 Press the **POWERFUL/QUIET** button once again to activate the "QUIET" mode. The "QUIET" indicator on the indoor unit is illuminated (Green).

**CANCEL**

- 1 Press the **POWERFUL/QUIET** button once again to cancel the powerful or quiet function. The "POWERFUL" or "QUIET" indicator on the indoor unit is no illuminate.

Note: When the powerful/quiet function be activated, the indoor unit "POWERFUL" of "QUIET" indicator will be illuminated, but there is no indicator for this function on remote control screen.

**TO SET THE TIMER**

The ON and OFF time can be set in the 12 hour range in 1 hour increment.

**ON TIMER setting**

\* Set the "ON TIMER" only when unit in off period. During ON period the "ON TIMER" is invalid.

- 1 Press the **ON TIMER** button
  - Each press can change the set time from 6, 7, 8...12, 1, 2...5...
  - Press and hold the button to change setting time continuously.

- 2 Press the **SET** button (The "TIMER" indicator on the indoor unit is illumination [Orange]).

**OFF TIMER setting**

\* Set the "OFF TIMER" only when unit in off period. During OFF period the "OFF TIMER" is invalid.

- 1 Press the **OFF TIMER** button
  - Each press can change the set time from 1, 2, 3, 4...12, 1, 2...
  - Press and hold the button to change setting time continuously.

- 2 Press the **SET** button (The "TIMER" indicator on the indoor unit is illumination [Orange]).

**OUTDOOR UNIT**



CU-PU36WKQ