


INSTALLATION AND OPERATING REQUIREMENTS

- The remote control can link up to 10 energy recovery ventilators.
- The mounting surface should be as flat as possible to prevent deformation of the product. (If the wall is not flat, the LCD screen may be damaged, or faults may occur.)
- If the installation position is too high or too low, you may not be able to see the LCD screen clearly. It is recommended that the product be mounted 1.5 m or so above the ground for clear vision. For users with physical disabilities and wheelchair users, the height may need to be adjusted accordingly in line with local regulations.
- The remote control with the RS485 function shall be at least 1 m away from TV sets, broadcast radios, computers, etc. (Otherwise, it may cause distorted or skewed images or noises.)
- The switch box required for installation is included inside the packing case of the ERV. Always keep in mind the appearance specifications of the remote control, and ensure that the switch box you bought can match the remote control.
Recommended exterior dimensions: $\geq 102 \text{ mm} \times 102 \text{ mm} \times 35 \text{ mm}$ (H x W x D).

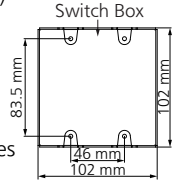

SUPPLIED ACCESSORIES

The product comes with the following accessories. After unpacking the packing case, check that all items are included. If anything is missing, please contact your dealer.

No.	①	②	③
Figure			
Name	Remote Control	Screws (M4x20)	Installation and Operating Instructions
Quantity	1	4	1

PART NAMES AND DIMENSIONS

Outside view

Unit: mm

