

## INSTALLATION INSTRUCTIONS INDOOR UNIT

Model No.:	S-60PE4*	S-71PE4*	S-100PE4*
	S-100PE4*N	S-125PE4*	S-125PE4*N
	S-140PE4*	S-140PE4*N	S-160PE4*
	S-160PE4*N	S-160PE4*A	

# CAUTION

## R32 REFRIGERANT

This Air Conditioner contains and operates with refrigerant R32.

THIS PRODUCT MUST ONLY BE INSTALLED OR SERVICED BY QUALIFIED PERSONNEL.

Refer to Commonwealth, State, Territory and local legislation, regulations, codes, installation & operating instructions, before the installation, maintenance and/or service of this product.

Refer to the outdoor unit installation instruction manual for the outdoor unit installation.

Note: Ensure to hand over this installation instruction manual to the person performing the installation and inform the customer to keep it properly stored.

## DISCLAIMER

Panasonic will not be responsible for any accident or damage due to improper installation in anyway not described in the detailed manuals. Malfunction caused by incorrect installation is also not covered by product warranty.

## IMPORTANT

PE4\* & PE4\*N Series cannot be installed underfloor, please use PE4\*A Series only for underfloor installation.

## SAFETY PRECAUTIONS

- Read the following "SAFETY PRECAUTIONS" carefully before installation.
- Electrical work must be installed by a licensed electrician. Be sure to use the correct rating of the power plug and main circuit for the model to be installed.
- The caution items stated here must be followed because these important contents are related to safety. The meaning of each indication used is as below. Incorrect installation due to ignoring of the instruction will cause harm or damage, and the seriousness is classified by the following indications.

<b>WARNING</b>	This indication shows the possibility of causing death or serious injury.
<b>CAUTION</b>	This indication shows the possibility of causing injury or damage to properties only.

The items to be followed are classified by the symbols:

	Symbol with white background denotes item that is PROHIBITED.
	Symbol with dark background denotes item that must be carried out.

- Carry out test running to confirm that no abnormality occurs after the installation. Then, explain to user the operation, care and maintenance as stated in instructions. Please remind the customer to keep the operating instructions for future reference.

	<b>WARNING</b>
	Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer. Any unit method or using incompatible material may cause product damage, burst and serious injury.
	Do not install outdoor unit near handrail of veranda. When installing air-conditioner unit on veranda of a high rise building, child may climb up to outdoor unit and cross over the handrail causing an accident.
	Do not use unspecified cord, modified cord, joint cord or extension cord for power supply cord. Do not share the single outlet with other electrical appliances. Poor contact, poor insulation or over current will cause electrical shock or fire.
	Do not tie up the power supply cord into a bundle by band. Abnormal temperature rise on power supply cord may happen.
	Do not insert your fingers or other objects into the unit, high speed rotating fan may cause injury.
	Do not sit or step on the unit, you may fall down accidentally.
	Keep plastic bag (packaging material) away from small children, it may cling to nose and mouth and prevent breathing.
	When installing or relocating air conditioner, do not let any substance other than the specified refrigerant, e.g. air etc mix into refrigeration cycle (piping). Mixing of air etc. will cause abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
	Do not pierce or burn as the appliance is pressurized. Do not expose the appliance to heat, flame, sparks, or other sources of ignition. Else, it may explode and cause injury or death.
	Do not add or replace refrigerant other than specified type. It may cause product damage, burst and injury etc.
	Do not use joint cable for indoor / outdoor connection cable. Use the specified indoor/outdoor connection cable, refer to instruction ⑤ <b>ELECTRICAL WIRING</b> and connect tightly for indoor/outdoor connection. Clamp the cable so that no external force will have impact on the terminal. If connection or fixing is not perfect, it will cause heat up or fire at the connection.

- For R32 model, use new piping, flare nut and tools which is specified for R32 refrigerant. Using of existing (R22) piping, flare nut and tools may cause abnormally high pressure in the refrigerant cycle (piping), and possibly result in explosion and injury. For R32 and R410A, use the same flare nut on the outdoor unit side and pipe can be use.
- Since the working pressure for R32/R410A is higher than that of refrigerant R22 models, replacing conventional piping and flare nuts on the outdoor unit side are recommended.
- If reuse piping is unavoidable, refer to instruction ⑤ **REFRIGERANT INSTALLATION (IN CASE OF REUSING EXISTING REFRIGERANT PIPING)** in outdoor unit installation manual.
- Thickness for copper pipes used with R32 must be more than 0.8 mm. Never use copper pipes thinner than 0.8 mm. For copper pipe ø15.88 or more use copper pipe thickness 1.0 mm and above.
- It is desirable that the amount of residual oil less than 40 mg/10 m.

- Engage authorized dealer or specialist for installation. If installation done by the user is incorrect, it will cause water leakage, electrical shock or fire.
- For refrigeration system work, install according to this installation instructions strictly. If installation is defective, it will cause water leakage, electrical shock or fire.
- Use the attached accessories parts and specified parts for installation. Otherwise, it will cause the set to fall, water leakage, fire or electrical shock.
- Install at a strong and firm location which is able to withstand weight of the set. If the strength is not enough or installation is not properly done, the set will drop and cause injury.
- For electrical work, follow the national regulation, legislation and this installation instruction. An independent circuit and single outlet must be used. If electrical circuit capacity is not enough or defect found in electrical work, it will cause electrical shock or fire.
- Wire routing must be properly arranged so that control board cover is fixed properly. If control board cover is not fixed perfectly, it will cause fire or electrical shock.
- This equipment is strongly recommended to be installed with Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD), with sensitivity of 30mA at 0.1 sec or less. Otherwise, it may cause electrical shock and fire in case of equipment breakdown or insulation breakdown.
- During installation, install the refrigerant piping properly before running the compressor. Operation of compressor without fixing refrigeration piping and valves at general position will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
- During pump down operation, stop the compressor before removing the refrigeration piping. Removal of refrigeration piping while compressor is operating and valves are opened will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
- Tighten the flare nut with torque wrench according to specified method. If the flare nut is over-tightened, after a long period, the flare may break and cause refrigerant gas leakage.
- After completion of installation, confirm there is no leakage of refrigerant gas. It may generate toxic gas when the refrigerant contacts with fire.
- Ventilate if there is refrigerant gas leakage during operation. It may cause toxic gas when the refrigerant contacts with fire.
- Be aware that refrigerants might not contain an odor.
- This equipment must be properly earthed. Earth line must not be connected to gas pipe, water pipe, earth of lightning rod and telephone. Otherwise, it may cause electrical shock in case of equipment breakdown or insulation breakdown.

	<b>CAUTION</b>
	Do not install the unit at place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire.
	Prevent liquid or vapor from entering sumps or sewers since vapor is heavier than air and may form sulfating atmospheres.
	Do not overcharge the unit, refer to gas charge specification in Outdoor Installation manual. Overcharge will cause over current and damage to compressor.
	Do not release refrigerant during piping work for installation, re-installation and during repairing a refrigeration parts. Take care of the liquid refrigerant, it may cause frostbite.
	Do not install this appliance in a laundry room or other location where water may drip from the ceiling, etc.
	Do not touch the sharp aluminum fin, sharp parts may cause injury.
	Carry out drainage piping as mentioned in installation instructions. If drainage is not perfect, water may enter the room and damage the furniture.
	Select an installation location which is easy for maintenance. Incorrect installation, service or repair of this air conditioner may increase the risk of rupture and this may result in loss damage or injury and/or property.
	Power supply connection to the room air conditioner. Use power supply cord type designation 60245 IEC 57 or heavier cord. Connect the power supply cord of the air conditioner to a circuit breaker for the permanent connection. It must be a double pole switch with a minimum 3.0mm contact gap. Power supply point should be in easily accessible place for power disconnection in case of emergency.
	Installation work. It may need two people to carry out the installation work.
	Keep any required ventilation openings clear of obstruction.

## PRECAUTION FOR USING R32 REFRIGERANT

- The basic installation work procedures are the same as conventional refrigerant (R410A, R22) models. However, pay careful attention to the following points.

- Do not perform fire connection inside a building or dwelling or room, when joining the heat exchanger of indoor unit with interconnecting piping. Refrigerant connection inside a building or dwelling or room must be made by brazing or welding. Joint connection of indoor unit by flaring method can only be made at outdoor or at outside of a building or dwelling or room. Flare connection may cause gas leak and flammable atmosphere.
- The appliance shall be stored, installed and operated in a well ventilated room with indoor floor area larger than  $A_{min}$  (Refer to Check of Density Limit) and without any continuously operating ignition source. Keep away from open flames, any operating gas appliances or any operating electric heater. Else, it may explode and cause injury or death.
- Refer to "PRECAUTION FOR USING R32 REFRIGERANT" in outdoor unit installation manual for other precautions that need to pay attention to.



https://eu.datanavi.ac.smartcloud.panasonic.com/documents/index.htm?model=S-160PE4R

## Required tools for Installation Works

1 Phillips screw driver	7 Pipe cutter	15 Torque wrench
2 Flathead screw driver	8 Reamer	18 Nm (1.8 kgf·m)
3 Level gauge	9 Knife	42 Nm (4.3 kgf·m)
4 Electric drill, hole core drill (ø70 mm)	10 Gas leak detector	55 Nm (5.6 kgf·m)
5 Hexagonal wrench (4 mm)	11 Measuring tape	65 Nm (6.6 kgf·m)
6 Spanner	12 Thermometer	100 Nm (10.2 kgf·m)
	13 Megohmmeter	16 Vacuum pump
	14 Multimeter	17 Gauge manifold


Explanation of symbols displayed on the indoor unit or outdoor unit.

	<b>AZL WARNING</b>	This symbol shows that this equipment uses a flammable refrigerant. If the refrigerant is leaked, together with an external ignition source, there is a possibility of ignition.
	<b>CAUTION</b>	This symbol shows type of flammable refrigerant contained in the system.
	<b>CAUTION</b>	This symbol shows that the Operating Instructions should be read carefully.
	<b>CAUTION</b>	This symbol shows that a service personnel should be handling this equipment with reference to the Technical Manual.

## Check of Density Limit

The refrigerant (R32), which is used in the air conditioner, is a flammable refrigerant. So the requirements for installation space of appliance are determined according to the refrigerant charge amount [m] used in the appliance.

Regarding the refrigerant charge amount [m] used in the appliance, refer to the installation instructions for the outdoor unit. The minimum indoor floor space compared with the amount of refrigerant is roughly as follows:

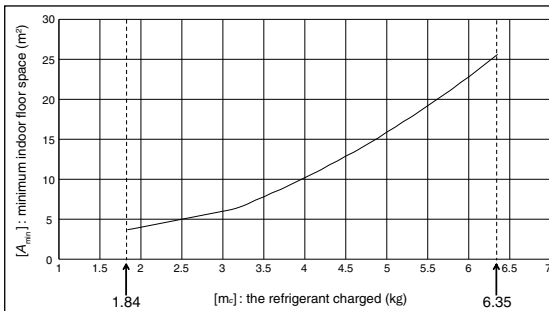

$$A_{min} = (m_r / (2.5 \times (LFL)^{0.66} \times h_2)) \times \text{factor margin}$$


$A_{min}$  : Required minimum room area, in m<sup>2</sup>  
 $m_r$  : Refrigerant charge in appliance, in kg  
 $LFL$  : Lower flammability limit (0.307 kg/m<sup>3</sup>)  
 $h_2$  : Release height is 2.2m.  
 $CF$  : Concentration factor with a value of 0.75  
 \*\* The required minimum room area,  $A_{min}$ , shall also be governed by the safety factor margin formula below :

$$A_{min} = m_r / (CF \times LFL \times h_2)$$

The higher value shall be taken when determining the room area.  $m_r \leq 1.84$  : Can be installed  
 $1.84 < m_r \leq 6.35$  : Can be installed above "Density Limit Line" \*\*  
 \*1 Refer to table and the installation instructions of indoor unit when deciding "Density Limit Line".

[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)
1.84	3.7	2.8	5.6	3.8	9.2	4.7	14.0	5.6	19.9
1.9	3.8	2.9	5.8	3.9	9.7	4.8	14.6	5.7	20.6
2.0	4.0	3.0	6.0	4.0	10.2	4.9	15.2	5.8	21.3
2.1	4.2	3.1	6.2	4.1	10.7	5.0	15.9	5.9	22.1
2.2	4.4	3.2	6.5	4.2	11.2	5.1	16.5	6.0	22.8
2.3	4.6	3.3	6.9	4.3	11.8	5.2	17.2	6.1	23.6
2.4	4.8	3.4	7.4	4.4	12.3	5.3	17.8	6.2	24.4
2.5	5.0	3.5	7.8	4.5	12.9	5.4	18.5	6.3	25.2
2.6	5.2	3.6	8.3	4.6	13.4	5.5	19.2	6.35	25.6
2.7	5.4	3.7	8.7						

## For PE4\*A Series Only

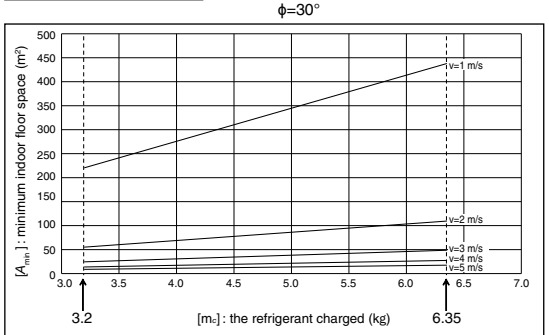

[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)
3.2	220.7	55.2	24.6	13.8	8.9	3.4	234.5	58.7	26.1
3.6	248.3	62.1	27.6	15.6	10.0	3.8	262.0	65.5	28.2
4.0	275.8	69.0	30.7	17.3	11.1	4.2	289.6	72.4	32.2
4.4	303.4	75.9	33.8	19.0	12.2	4.6	317.2	79.3	35.3
4.8	331.0	82.8	36.9	20.7	13.3	5.0	348.6	86.2	38.4
5.2	358.6	89.7	39.9	22.5	14.4	5.4	372.4	93.1	41.4
5.6	386.2	96.6	43.0	24.2	15.5	5.8	399.9	100.4	44.5
6.0	413.7	103.5	46.0	25.9	16.6	6.2	427.5	106.9	47.5
6.35	437.9	109.5	48.7	27.4	17.6				

[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)
3.2	110.4	27.6	12.3	6.9	6.4	3.4	117.3	29.4	13.1
3.6	124.2	31.1	13.8	7.8	7.2	3.8	131.0	32.8	14.6
4.0	137.9	34.5	15.4	8.7	7.9	4.2	144.8	36.2	16.1
4.4	151.7	38.0	16.9	9.5	8.7	4.6	158.6	39.7	17.7
4.8	165.5	41.4	18.4	10.4	9.5	5.0	172.4	43.1	19.2
5.2	179.3	44.9	20.0	11.3	10.3	5.4	186.2	46.6	20.7
5.6	193.1	48.3	21.5	12.1	11.1	5.8	200.0	50.0	22.3
6.0	206.9	51.8	23.0	13.0	11.9	6.2	213.8	53.5	23.8
6.35	219.0	54.8	24.4	13.7	12.6				

[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)
3.2	73.6	18.4	8.2	6.4	6.4	3.4	78.2	19.6	8.7
3.6	82.8	20.7	9.2	7.2	7.2	3.8	87.4	21.9	9.8
4.0	92.0	23.0	10.3	7.9	7.9	4.2	96.6	24.2	10.8
4.4	101.2	25.3	11.3	8.7	8.7	4.6	105.8	26.5	11.8
4.8	110.4	27.6	12.3	9.5	9.5	5.0	119.4	29.9	13.3
5.0	115.0	28.8	12.8	9.9	9.9	5.2	119.6	29.9	13.3
5.4	124.2	31.1	13.8	10.7	10.7	5.6	128.8	32.2	14.4
5.8	133.3	33.4	14.9	11.5	11.5	6.0	137.9	34.5	15.4
6.2	142.5	35.7	15.9	12.3	12.3	6.35	146.0	36.5	16.3

[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)	[m] kg	[Amin] (m²)
3.2	55.2	13.8	6.4	6.4	6.4	3.4	58.7	14.7	6.8
3.6	62.1	15.6	7.2	7.2	7.2	3.8	65.5	16.4	7.6
4.0	69.0	17.3	7.9	7.9	7.9	4.2	72.4	18.1	8.3
4.4	75.9	19.0	8.7	8.7	8.7	4.6	79.3	19.9	9.1
4.8	82.8	20.7	9.5	9.5	9.5	5.0	86.2	21.6	9.9
5.2	89.7	22.5	10.3	10.3	10.3	5.4	96.6	24.2	11.1
5.6	96.6	24.2	11.1	11.1	11.1	5.8	100.0	25.0	11.5
6.0	103.5	25.9	11.9	11.9	11.9	6.2	106.9	26.8	12.3
6.35	109.5	27.4	12.6	12.6	12.6				

## NOTE

Installation with lower edge of air inlet duct within 0.2m from the floor only

$$A_{min} = m_r / (CF \times LFL \times h_2)$$

$A_{min}$  : Required minimum room area, in m<sup>2</sup>  
 $m_r$  : Refrigerant charge in appliance, in kg  
 $CF$  : Concentration factor with a value of 0.75  
 $LFL$  : Lower flammability limit (0.307 kg/m<sup>3</sup>)  
 $h_2$  : estimated reaching height of airflow, in m.  
 $h_2 = h_1 + h_2$  \*  $h_2$  values max. at 2.2m only.  
 $h_1$  : Height of upper edge of the air discharge opening = 0m (installation of air discharge at floor only)  
 $h_2$  : Dynamic reaching height of airflow in m  

$$h_2 = \left( 1 + \frac{2.35}{LFL} \left( 1 - \frac{1.2}{\rho} \right) + 0.05 \right) \times (0.0183 \times v^2 \times \sin^2 \phi)$$
 $\rho$  : Gas density of the refrigerant at 1 atm pressure and 25 °C, which is 2.13 kg/m<sup>3</sup>  
 $v$  : Circulation airflow velocity in appliance, in m/s  
 $\phi$  : Circulation airflow elevation angle from horizontal in degrees 0° <  $\phi$  ≤ 90°

## WARNING (PE4\*A SERIES ONLY)

- This unit is equipped with a leak detection system for safety. For leak detection to be effective, the unit must be electrically powered at all times after installation, other than when servicing.
- When the alarm display J04 appears, it is the end of life of the sensor board of the built-in R32 refrigerant leak sensor. Contact the service dealer as soon as possible to replace the sensor board. (If the sensor board is used as it is without being replaced, the sensor may be deteriorated and the refrigerant leakage may not be detected properly.)
- As to replacement method of the sensor board of the built-in R32 refrigerant leak sensor, refer to the indoor unit service manual.

## ACCESSORIES SUPPLIED WITH INDOOR UNIT

Part Name	Figure	Q'ty	Remarks	Part Name	Figure	Q'ty	Remarks
Special washer		8	For indoor unit suspension	Hose band		1	For securing drain hose
Drain hose		1	For drain hose connection	Clamper		3	For power supply cord / control wiring

# 1 SELECT THE INDOOR UNIT INSTALLATION LOCATION

## 1-1. Indoor Unit

- Provide a check port on the piping side ceiling for repair and maintenance.
- Install the indoor unit once the following conditions are satisfied and after receiving the customer approval.
  - The indoor unit must be within a maintenance space.
  - The indoor unit must be free from any obstacles in path of the air inlet and outlet, and must allow spread of air throughout the room.
  - If the height from the floor to ceiling exceeds three meters, air flow distribution deteriorates and the effect is decreased.

## WARNING

- The installation position must be able to support a load four times the indoor unit weight.
- The indoor unit must be away from heat and sources of steam, but avoiding installation near an entrance.
- The indoor unit must allow easy draining.
- The indoor unit must allow easy connection to the outdoor unit.
- The indoor unit must be at least 3 m away from any noise-generating equipment. The electrical wiring must be shielded with a steel conduit.
- If the power supply is easy to noise generation, add a suppressor.
- Do not install the unit in a laundry. Electric shocks may result.
- Installation height is more than 2.5m (except PE4\*A series)

## NOTE

- Thoroughly study the following installation locations
  - In such places as restaurants and kitchens, considerable amount of oil steam and flour adhere to the fan, the fin of the heat exchanger, resulting in heat exchange reduction, spraying, dispersing of water drops, etc.
  - In these cases, take the following actions:
    - Make sure that the ventilation fan for smoke-collecting hood on a cooking table has sufficient capacity so that it draws oily steam which should not flow into the section of the air conditioner.
    - Make sure there is enough distance from the cooking room to install the air conditioner in such place where it may not suck in oily steam.
  - Avoid installing the air conditioner in such circumstances where cutting oil mist or iron powder exist, especially in factories, etc.
  - Avoid places where inflammable gas is generated, flows-in, contaminated, or leaked.
  - Avoid places where sulphurous acid gas or corrosive gas can be generated.
  - Avoid places near high frequency generators.



## 2-4. Installing the Refrigerant Tubing

The size of the refrigerant tubing is as shown in the table below.  
Table 2-1

Type	S-60PE4*	S-71PE4* / S-100PE4* / S-100PE4*N / S-125PE4* / S-125PE4*N / S-140PE4* / S-140PE4*N	S-160PE4* / S-160PE4*N / S-160PE4*A
Gas tube	ø12.7 (Flare connection) Tightening torque (approximate): 49 ~ 55 Nm Thickness of connecting tube: 0.8mm	ø15.88 (Flare connection) Tightening torque (approximate): 68 ~ 82 Nm Thickness of connecting tube: 1.0mm	ø19.05 (Flare connection) Tightening torque (approximate): 100 ~ 120 Nm Thickness of connecting tube: 1.0mm
Liquid tube	ø6.35 (Flare connection) Tightening torque (approximate): 14 ~ 18 Nm Thickness of connecting tube: 0.6 mm	ø6.52 (Flare connection) Tightening torque (approximate): 34 ~ 42 Nm Thickness of connecting tube: 0.6 mm	

## 2-5. Installing the Drain Piping

### 2-5-1. Before Performing the Installation Drain Piping

- (1) Prepare standard hard PVC pipe (O.D. 32 mm) for the drain and use the supplied drain socket to prevent water leaks. The PVC pipe must be purchased separately.
- (2) When doing this, apply adhesive for the PVC pipe at the connection point. See section 2-5-2. Installing the Drain Pipe\*.

### (2) Limitations of Drain Hose Connection

**CAUTION**  
Do not make a trap in the middle of the supplied drain pipe. Doing so will cause abnormal sound.

(3) Ensure the drain pipe has a downward slant (1/100 or more).

Downward slant  
Min. 1/100

\*a: over 100mm  
b: over 50mm

Note: Since the drain trap area easily accumulates the dust inside the drain pipe, necessarily install the plug in order to clean out the drain trap.

(4) The drain pipe with a trap should be installed away from the indoor unit.

(5) Do not attach any air pump equipment. If attached, drain water may result in splashing out of the drain pipe.

(6) When the drain piping is completed, perform the water leak test and check for a water leak. If detected, it may result in water leakage or condensation.


(7) When the drain piping is completed, perform the drainage test if the water drains smoothly. If not draining smoothly, it may result in water leakage or condensation.

(8) When the drain piping work is finished securely, wrap the insulation material around the indoor side drain pipe. At this time, do not wrap together with the refrigerant tubing. If wrapped together, the drain pipe is lifted and water drainage will not be operated. Consequently, the water comes out of the drain pan and it can lead to water leakage.

### 2-5-2. Installing the Drain Pipe

#### CAUTION

- (1) How to Connect Drain Port and Drain Hose
  - First insert the supplied hose band into the drain port pipe. Then make sure the head of the screw is facing toward a technical engineer when placing the screw of the hose band at an upward position.
  - Insert the soft PVC socket of the supplied drain hose to the drain port pipe.
  - Never apply the adhesive to both ends of the soft PVC socket and the drain port pipe.
  - Insert the drain hose to the point where there is a difference in level as shown in the figure below and fasten it with the hose band 5 mm away from that position.
  - Tightening torque must be 2.5 ~ 3.4 Nm.
  - Tightening position of the hose band must be upward.
- (2) How to Install the Drain Pipe
  - Connect the hard PVC pipe (O.D. 32 mm) to the side of the soft PVC socket of the drain hose and the side of the hard PVC pipe.
  - Apply approx. 2 g of adhesive on the side of the soft PVC socket of the drain hose and the side of the hard PVC pipe.
  - Do not apply force to the drain port when connecting the drain pipe. Install and fix it near the indoor unit as close as possible.

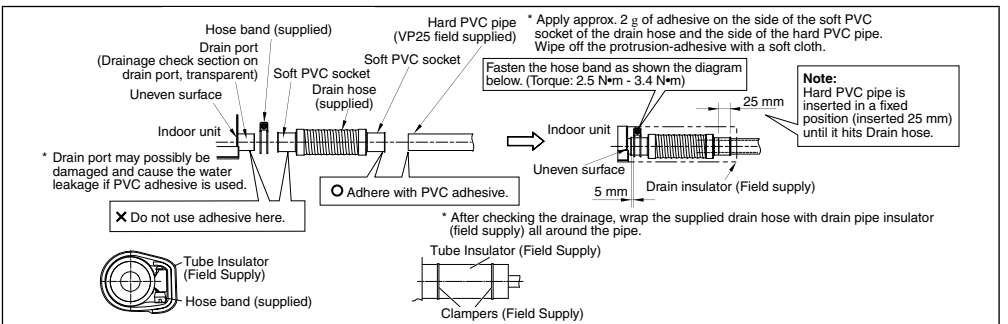


- (3) Insulating the Drain Hose
  - Selection of heat insulation materials for drain hose (Drain insulator). When using the heat insulation materials (field supply), kindly use the same size and performance as refrigerant tubes. Check for its size as below table.

Insulation Material	Thermal insulation thickness
Polyethylene foam (same as heat insulators for refrigerant tubes)	Insulation thickness must 10mm or greater

## 2-6. Caution for Ducting Work

- This unit has high static pressure.
- In case of small pressure resistance (for instance, a short duct), install an airflow control damper (field supply) for adjusting airflow volume or airflow noise increases.
- If the air conditioner is to be installed in a room such as an office or meeting room which needs a low sound level, provide a supply and return sound absorption chamber with an acoustic liner.
- Use a flexible canvas connection or vibration isolation hanger (field supply) to break transmission of mechanical vibration of the unit.

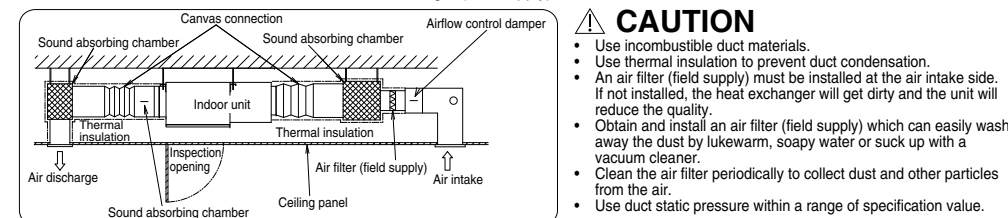

# 3 ELECTRICAL WIRING

As to main power source and cable size of outdoor unit, read the installation manual attached to the outdoor unit.

## 3-1. General Precautions on Wiring


- This air conditioner must be installed in accordance with national wiring regulations.
- Cables connected to indoor unit must be approved polychloroprene sheathed type 60245 IEC 57 or heavier.
- The units must be connected to the supply cables for fixed wiring by qualified technician.
- Circuit breaker must be incorporated in the fixed wiring in accordance with the national wiring regulations. The circuit breaker must be approved, suitable for the voltage and current ratings of equipment and have a contact separation by 3mm in all poles.
- When the supply cable is damaged, it must be replaced by qualified technician.
- Be sure to install a current leakage breaker, main switch and fuse to the main power supply, otherwise electric shocks may result.
- Be sure to connect the unit to secure earth connection.
  - If the earthing work is not carried out properly, electric shocks may result.
- Wiring shall be connected securely by using specified cables and fix them securely so that external force of the cables may not transfer to the terminal connection section.
- Imperfect connection and fixing leads to fire, etc.

- (1) Select a power source that is capable of supplying the current required by the air conditioner.
- (2) Feed the power source to the unit via a distribution switch board designed for this purpose, the switch should disconnect all poles with a contact separation of at least 3 mm.
- (3) Always ground the air conditioner with a grounding wire and screw to meet the LOCAL REGULATIONS.
- (4) Be sure to connect the indoor/outdoor unit connection wires correctly to terminal board.
- (5) Be sure to turn off the main power before installing and connecting the remote controller.
- (6) Each wiring connection must be done in accordance with the wiring system diagram.

### NOTE

If momentarily turning on the power supply for both the indoor and outdoor units, do not turn the power off after at least 1 minute has passed. (For the system's automatic setting.) Turning off the power supply on the way may cause an abnormal operation.

## 3-2. Wiring System Diagrams

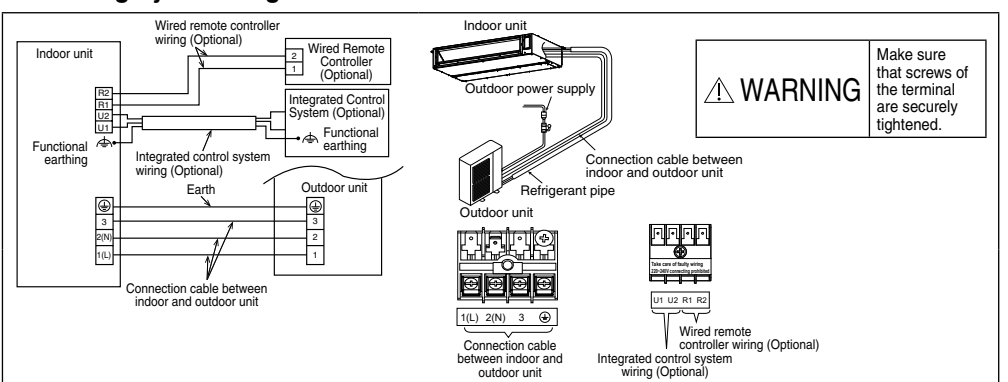

## 3-3. Recommended Wire Length and Wire Size


Connection cable between Indoor and Outdoor Unit	Wired Remote Controller	Wired Remote Controller (Optional)
Wire Size	Wire Size	Wire Size
Length	Length	Length
2.5mm²	Max. 100m	Max. 500m
		(AWG#18)
		(CZ-RT-C68LV)

Use shielded wires for integrated control system wiring and ground the shield in both sides, otherwise misoperation from noise may occur. Connect wiring as shown in Section 3-2. Wiring System Diagrams.


Shielded wire (Functional earthing)

## NOTE

For Optional Parts connecting wiring size, refer to Installation Manual of the Optional Parts

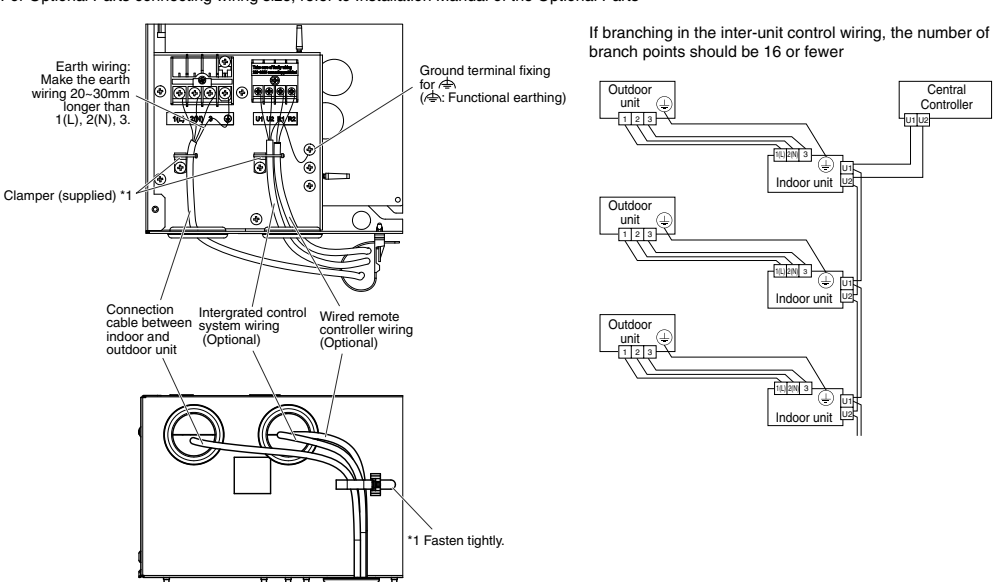

## WIRE STRIPPING AND CONNECTING REQUIREMENT

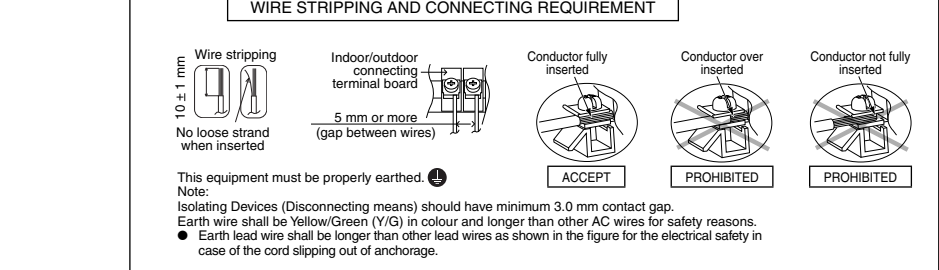

# 4 REFRIGERANT PIPING

Must ensure mechanical connections be accessible for maintenance purposes. The liquid tubing side is connected by a flare nut, and the gas tubing side is connected by brazing.

## 4-1. Connecting the Refrigerant Tubing

### Caution During Brazing

- Replace air inside the tube with nitrogen gas to prevent copper oxide film from forming during the brazing process. (Oxygen, carbon dioxide and Freon are not acceptable.)
- Do not allow the tubing to get too hot during brazing. The nitrogen gas inside the tubing may overheat, causing refrigerant system valves to become damaged. Therefore allow the tubing to cool when brazing.
- Use a reducing valve for the nitrogen cylinder.
- Do not use agents intended to prevent the formation of oxide film. These agents adversely affect the refrigerant and refrigerant oil, and may cause damage or malfunctions.

## 4-2. Connecting Tubing Between Indoor and Outdoor Units

- (1) Tightly connect the indoor-side refrigerant tubing extended from the wall with the outdoor-side tubing.

### Indoor Unit Tubing Connection

Indoor unit type	S-60PE4*	S-71PE4* / S-100PE4* / S-125PE4* / S-125PE4*N / S-140PE4* / S-140PE4*N	S-160PE4* / S-160PE4*N / S-160PE4*A
Gas tubing (mm)	ø12.7	ø15.88	ø19.05
Liquid tubing (mm)	ø6.35	ø9.52	

- (2) To fasten the flare nuts, apply specified torque.
- When removing the flare nuts from the tubing connections, or when tightening them after connecting the tubing, be sure to use a torque wrench and a spanner. If the flare nuts are over-tightened, the flare may be damaged, which could result in refrigerant leakage and cause injury or asphyxiation to room occupants.
- For the flare nuts at tubing connections, be sure to use the flare nuts that were supplied with the unit, or else flare nuts for R410A, R32 (type 2). The refrigerant tubing that is used must be of the correct wall thickness as shown in the table below.

Tube diameter	Flare nut tightening torque (approximate)	Min. tube thickness
ø6.35 (1/4")	16±2 N·m (160±20 kgf·cm)	0.8 mm
ø9.52 (3/8")	38±4 N·m (380±40 kgf·cm)	0.8 mm
ø12.7 (1/2")	52±3 N·m (520±30 kgf·cm)	0.8 mm
ø15.88 (5/8")	75±7 N·m (750±70 kgf·cm)	1.0 mm
ø19.05 (3/4")	110±10 N·m (1100±100 kgf·cm)	1.0 mm

- Because the pressure is approximately 1.6 times higher than conventional refrigerant R22 pressure, the use of ordinary flare nuts (type 1) or thin-walled tubes may result in tube rupture, injury, or asphyxiation caused by refrigerant leakage.
- In order to prevent damage to the flare caused by over-tightening of the flare nuts, use the table above as a guide when tightening.
- When tightening the flare nut on the liquid tube, use an adjustable wrench with a nominal handle length of 200 mm.

## 4-3. Insulating the Refrigerant

- Be sure to perform heat insulation on the drain, liquid and gas piping. Imperfection in heat insulation work leads to water leakage.

- (1) Selection of heat insulation materials for refrigerant tube. When using heat insulation materials (field supply), kindly check for its sizes and performance.
  - Material for insulation material: Polyethylene foam.
  - Heat transfer rate: less than 0.05 W/m·K.
  - Material withstand temperature: 120°C or above (gas tubing).
  - For other tubing 80°C or above.
- Must be easy to use, age resistance and not easily absorb moisture.
- Be sure to match the below insulation material size with tube sizes.

Piping size, mm (in)	Thermal insulation size (I.D.)	Thermal insulation Thickness
6.35 (1/4")	10 ~ 13 mm	
9.52 (3/8")	12 ~ 15 mm	
12.7 (1/2")	14 ~ 16 mm	
15.88 (5/8")	17 ~ 20 mm	
19.05 (3/4")	20 ~ 24 mm	
ø25.4 (1")	25 ~ 28 mm	

- (2) Taping the flare nuts
  - Wind the white insulating tape around the flare nuts at the gas tube connection.
  - Then cover up the tubing connection with tube insulator (field supply) and fill in the gap with black insulation tape.
  - Finally fasten with clampers (field supply)


## NOTE

If noise bothers you from the area between indoor and outdoor units' connection pipes, it is effective to wind the soundproofing materials (field supply) to reduce noise.

- (3) Taping the tubes
  - Refrigerant tubes (and electrical wiring if local permit) should be taped together with armoured tape in 1 bundle. Keep the drain hose separate from refrigerant tube to prevent condensation.
  - Wrap the armoured tape from bottom of the outdoor unit to the tubing here it enters the wall. Overlap half of each previous turn.
  - Clamp the tubing to the wall, using 1 clamp approx. per each meter apart.

## NOTE

Do not wind the armoured tape too tightly since this will decrease the heat insulation effect. Also ensure that the condensation drain hose splits away from the bundle and drips clear of the unit and the tubing.

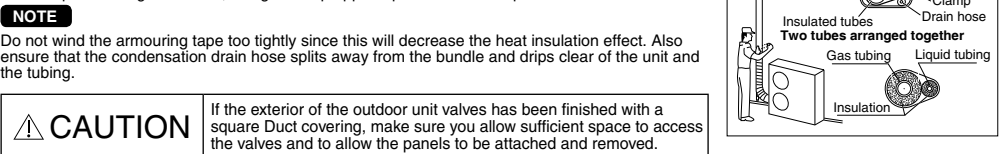

- (4) Finishing the Installation
  - After finishing insulating and taping over the tubing, use sealing putty to seal off the hole in the wall to prevent rain and draft from entering.
- (5) Precautions in high humidity circumstances
  - This air-conditioner has been tested according to the "JIS Standard Conditions with Mist" and have been confirmed that there are no faults. However, if it is operated for a long time in high humid atmosphere (dew point temperature: more than 23°C), water drops are liable to fall. In this case, add heat insulation material according to the following procedures:
    - Heat insulation material to be prepared. Adiabatic glass wool with thickness 10~20mm
    - Stick the wool on all air-conditions that are located in the ceiling atmosphere
    - In addition to the normal heat insulation (thickness: more than 10mm) refrigerant piping, add a further of 10~30 mm thickness material.

## 4-4. Additional Precautions for R32 models

For connection joint of all models

Please make flare after inserting flare nut (locate at joint portion of tube assembly) onto the copper pipe. (In case of using long piping)

Connect the piping

- Align the center of piping and sufficiently tighten the flare nut with fingers.
- Further tighten the flare nut with torque wrench in specified torque as stated in the table.

Additional Precautions For R32 Models when connecting by flaring at indoor side

Ensure to do re-flaring of pipes before connecting to units to avoid leaking

Seal sufficiently the flare nut (both gas and liquid sides) with neutral cure (Alkoxy type) & ammonia-free silicone sealant and insulation material to avoid the gas leak caused by freezing.

\* Use of silicon containing ammonia can lead to stress corrosion on the joint & can cause leakage.

Apply neutral cure (Alkoxy type) & ammonia-free silicone sealant along the circumference

Neutral cure (Alkoxy type) & ammonia-free silicone sealant is only to be applied after pressure testing and cleaning up by following instructions of sealant, only to the outside of the connection. The aim is to prevent moisture from entering the connection joint and possible occurrence of freezing. Curing sealant will take some time. Make sure sealant will not peel off when wrapping the insulation.

(1) Vacuum Drying

- After completing the piping connection, execute vacuum drying for the connecting piping and the indoor unit. The vacuum drying must be carried out by using the service ports of both the liquid and gas side valves.

# 5 HOW TO INSTALL THE TIMER REMOTE CONTROLLER OR HIGH-SPEC WIRED REMOTE CONTROLLER (OPTIONAL PART)

## NOTE

Refer to the Installation Instructions attached to the optional Timer Remote Controller or optional High-spec Wired Remote Controller.

# 6 PRECAUTIONS ON TEST RUN


- Request that the customer be present when the test run is performed. At this time, explain the operation manual and have the customer perform the actual steps.
- Check that the 230~240 VAC power is not connected to the U1 & U2 terminal board terminal.
- If 230 ~ 240 VAC is accidentally applied, the Fuse on indoor unit Electronic Controller (Communication) will blow in order to protect the PCB.
- In this case, recover the connection by disconnect 2P connector wires that originally connected to the indoor unit Electronic Controller (Communication) OC connector and shift the connector wires to EMG connector on same indoor unit Electronic Controller (Communication). If operation is still not possible after shift to EMG connector, cut the jumper JP040 on the same indoor unit Electronic Controller (Communication).

# 7 EXTERNAL STATIC PRESSURE SETTING

Choose one of the methods (selection of "a", "b", "c" within the range of dotted line as shown in the flowchart below) and make settings.

- No setting changes: When using as it is factory preset at shipment.
- Manual setting (on indoor unit Electronic Controller (Main)): This is static pressure setting excepting factory preset at shipment. Dip switch select method.
- Manual setting (by wired remote controller): Static pressure setting excepting factory preset at shipment.

### Flow of External Static Pressure

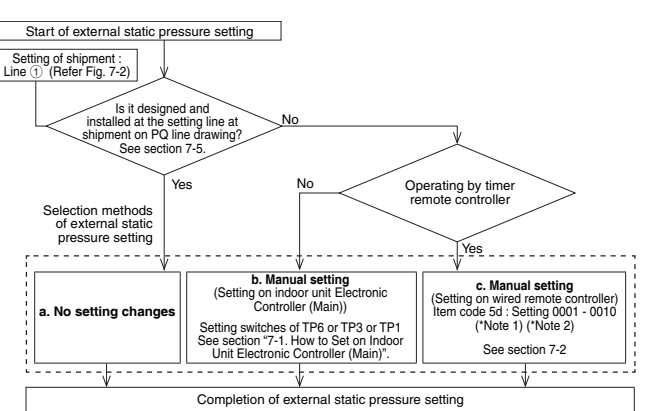

## CAUTION

- Make sure the external static pressure is in a range of specifications. Then proceed the external static pressure setting. Improper settings can cause noise, a shortage of airflow volume and water leakage. Refer to Fig. 7-2 for the external static pressure setting range.
- Be sure to set the [External Static Pressure Setting] once again after amending the airflow path for the duct or air outlet after setting the external static pressure.

## 7-1. How to Set on Indoor Unit Electronic Controller (Main)

- Turn off the power breaker to halt the supply of electricity to the indoor unit Electronic Controller (Main).
- Open the lid of the electrical component box and confirm the location where the Select switch on the indoor unit Electronic Controller (Main) is placed. (Fig. 7-1)
- Set the On/Off switches in the Off position which are now set in the On position. Select the positions of the Select SW001 switches respectively to make the desired external static pressure settings referring to the Table 7-1.

### Table 7-1 External static pressure SW setting

Indoor unit type	S-60PE4*	S-71PE4* / S-100PE4* / S-100PE4*N	S-125PE4* / S-125PE4*N	S-140PE4* / S-140PE4*N	S-160PE4* / S-160PE4*N / S-160PE4*A	TP6	TP3	TP1
External static pressure at the time of rated airflow volume								
110Pa						ON		
50Pa							ON	
10Pa								ON

## 7-2. Operating the Timer Remote Controller (CZ-RTC4A)

### How to set the external static pressure

- Press and hold down the and buttons simultaneously for 4 or more seconds. (The Unit No., Item Code and Detailed Data will blink on the LCD display.)
- Only the fan motor for the selected indoor unit will operate during this time.
- Specify the "5d" item code by pressing the / buttons for the temperature setting buttons and confirm the values. ("00 0 1" set at shipment)
- Press the buttons for the time to amend the values for the set data. Refer to Table 7-2 and Fig. 7-2 and select a value "00 0 1" - "00 10".
- Press the button. The display will stop blinking and remain illuminated.
- Press the button. The fan motor will stop operating and the LCD display will return to the normal stop mode.

### Table 7-2 Setting the external static pressure

Indoor unit	Item code
External static pressure of the rated airflow volume (Pa)	5d
150	00 10
140	00 09
130	00 08
120	00 07
110	00 06
90	00 05
70	00 04
50	00 03
30	00 02
10	00 01
80*	00 00

\* Setting at Shipment

## 7-3. Operating the High-spec Wired Remote Controller (CZ-RTC5B)

### How to set the external static pressure

Maintenance func 20:30 (THU)

0. ECONAVI info.

1. Outdoor unit error data

2. Service contact

3. RC setting mode

4. Sel. → Page [ ] Confirm

(1) Keep pressing the and buttons simultaneously for 4 or more seconds. The "Maintenance func" screen appears on the LCD display.

(2) Press the or button to see each menu. If you wish to see the next screen instantly, press the or button. Select "Detailed settings" on the LCD display and press the button.

The "Detailed settings" screen appears on the LCD display. Select the "Unit no." by pressing the or button for changes.

Detailed settings 20:30 (THU)

Unit no. Code no. Set data

3-1 10 0006

4. Sel. → Page [ ] Confirm

(3) Select the "Code no." by pressing the or button. Change the "Code no." to "5D" by pressing the or button (or keeping it pressed).

Detailed settings 20:30 (THU)

Unit no. Code no. Set data

3-1 5D 0001

4. Sel. → Next

(4) Select the "Set data" by pressing the or button. Select one of the "Set data" among "0001" - "0010" according to the desired external static pressure setting by pressing the or button. (See Table 7-2 and Fig. 7-2.) Then press the button.

Detailed settings 20:30 (THU)

Unit no. Code no. Set data

3-1 5D 0001

4. Sel. → Next

(5) Select the "Unit no." by pressing the or button and press the button. The "Exit detailed settings and restart?" screen appears on the LCD display. Select "YES" and press the button.

Exit detailed settings and restart?

YES NO

## 7-4. Operating the Wired Remote Controller (CZ-RTC6 series)

### Stop the system before performing these steps.

#### How to set the external static pressure

- Keep pressing the and buttons simultaneously for 4 or more seconds. The "Maintenance func" screen appears on the LCD display.

Maintenance func XX / XX

ECONAVI

nanoeX

RC setting mode

4. Sel. → Page [ ] Confirm

- Press the or button to see each menu. Select "Detailed settings" on the LCD display and press the button.

The "Detailed settings" screen appears on the LCD display.

Detailed settings

Unit no. Code no. Set data

1-1 XXXXXX

0 0 0 0 0 0

4. Sel. → Page [ ] Confirm

- Select the "Unit no." by pressing the or button. After selecting "Unit no.", press the button and proceed to Step 4. If the button is pressed, proceed to Step 6.

Detailed settings

Unit no. Code no. Set data

1-1 XXXXXX

0 0 0 0 0 0

4. Sel. → Page [ ] Confirm

- Keep pressing the button for 2 seconds or more during selecting "Code no.".

Change the "Code no." one digit at a time so that it becomes [00005D] along with the following procedures.

Detailed settings

Unit no. Code no. Set data

1-1 XXXXXX

0 0 0 0 0 0

4. Sel. → Page [ ] Confirm

- Press the or button to see each menu. Select "Detailed settings" on the LCD display and press the button.

Change the value by pressing the or button. After changing the value, press the button and set the next digit.

Detailed settings

Unit no. Code no. Set data

1-1 XXXXXX

0 0 0 0 0 0

4. Sel. → Page [ ] Confirm

- Press the or button to see each menu. Select "Detailed settings" on the LCD display and press the button.

Change the value by pressing the or button. After changing the value, press the button and set the next digit.

Detailed settings

Unit no. Code no. Set data

1-1 XXXXXX

0 0 0 0 0 0

4. Sel. → Page [ ] Confirm

- Press the or button to see each menu. Select "Detailed settings" on the LCD display and press the button.

Change the value by pressing the or button. After changing all digits, press the button and proceed to Step 5.

Detailed settings

Unit no. Code no. Set data

1-1 XXXXXX

0 0 0 0 0 0

4. Sel. → Page [ ] Confirm

- Select one of the "Set data" among "0001" - "0010" according to the desired external static pressure setting by pressing the or button. (See Table 7-2.)

After selecting "Set data", press the button. (If setting continuously, follow the procedures from Fig. A.) If you wish to change the selected indoor unit or finish setting, press the button twice (the display returns to Step 3).

Detailed settings

Unit no. Code no. Set data

1-1 XXXXXX

0 0 0 0 0 0

4. Sel. → Page [ ] Confirm

## NOTE

- Failure to set this parameter may result in decreased airflow and condensation.
- If the button is pressed under the display Step 3, the following display (Detailed setting-end screen) appears. Then select "YES" by pressing the or button and press the button.

Exit detailed settings and restart?

YES NO

CONTINUE TO THE NEXT PAGE

ENGLISH

ACXF60-59520

2/3

PRINTED IN MALAYSIA



7-5. Indoor Fan Performance


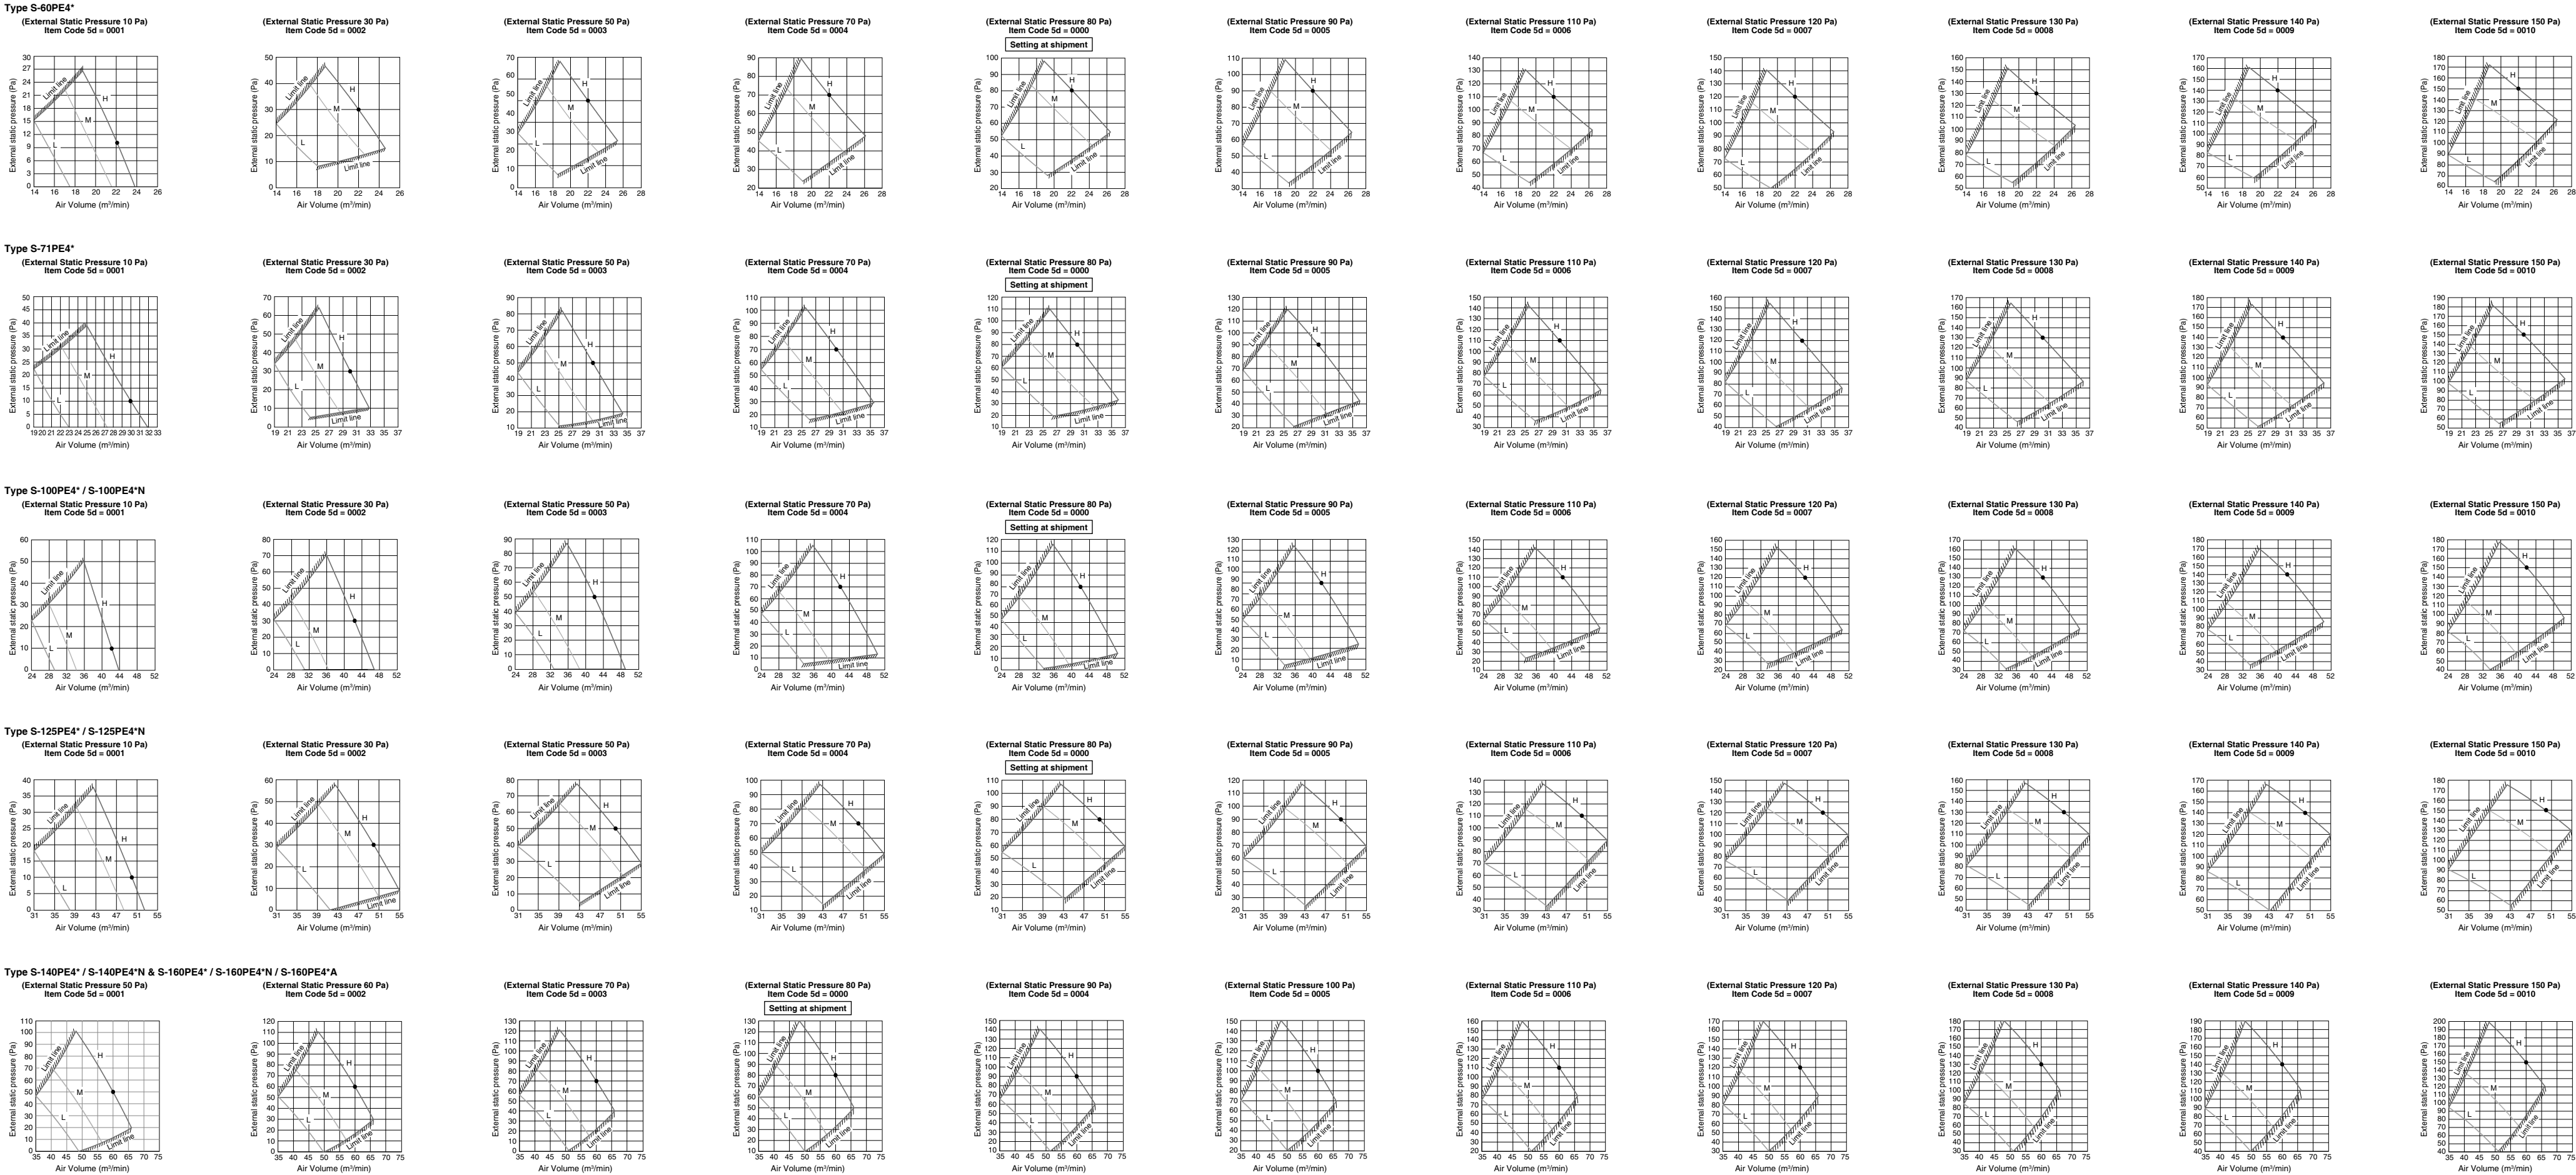


Fig. 7-2

8 APPENDIX

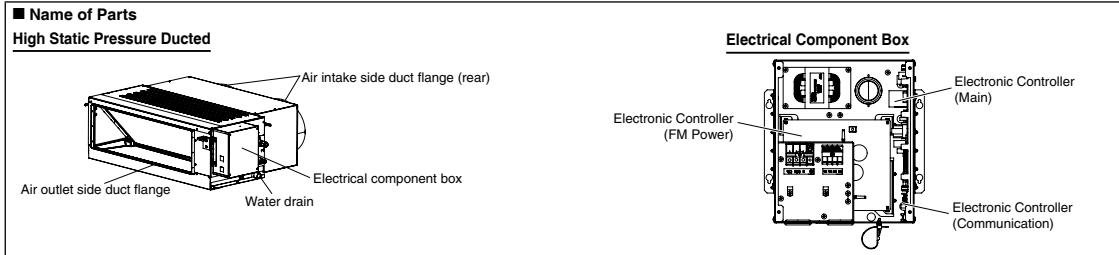

- Care and Cleaning**
- ⚠ WARNING**
- Engage authorized dealer or specialist for cleaning.
  - For safety, be sure to turn the air conditioner off and also to disconnect the power before cleaning.
  - Do not pour water on the indoor unit to clean it. This will damage the internal components and cause an electric shock hazard.
- Air intake and outlet side (Indoor unit)
- Clean the air intake and outlet side of the indoor unit with a vacuum cleaner brush, or wipe them with a clean, soft cloth. If these parts are stained, use a clean cloth moistened with water. When cleaning the air outlet side, be careful not to force the vanes out of place.
- ⚠ CAUTION**
- Never use solvents or harsh chemicals when cleaning the indoor unit. Do not wipe plastic parts using very hot water.
  - Some metal edges and the fins are sharp and may cause injury if handled improperly; be especially careful when you clean these parts.
  - The internal coil and other components of outdoor unit must be cleaned regularly. Consult your dealer or service center.

**Air filter**

- In case of installing the Duct (field supply)

Period (Depends on filter's specifications) When cleaning the air filter, consult your dealer or service center.

**⚠ CAUTION**

- Certain metal edges and the condenser fins are sharp and may cause injury if handled improperly; special care should be taken when you clean these parts.
- The internal coil and other components must also be cleaned periodically. Consult your dealer or service center.

**Care: After a prolonged idle period**

Check the indoor and outdoor unit air intakes and outlets for blockage; if there is a blockage, remove it.

**Care: Before a prolonged idle period**

- Operate the fan for half a day to dry out the inside.
- Disconnect the power supply and also turn off the circuit breaker.
- Clean the air filter and replace it in its original position.

**NOTE**

Should the power fail while the unit is running

If the power supply for this unit is temporarily cut off, the unit will automatically resume operation once power is restored using the same settings before the power was interrupted.

**Important Information Regarding The Refrigerant Used**

**NOTE**

Refer to the Installation Instructions attached to the outdoor unit.

CHECK THE FOLLOWING ITEMS WHEN INSTALLATION IS COMPLETE

- After completing work, be sure to measure and record trial run properties, and store measuring data, etc.
  - Measuring items are room temperature, outside temperature, suction temperature, blow out temperature, wind velocity wind volume, voltage, current, presence of abnormal vibration and noise, operating pressure, piping temperature, compressive pressure, airtight pressure.
  - As to the structure and appearance, check the following items.
- |  |  |  |
|--|--|--|
| <input type="checkbox"/> Is circulation of air adequate?                             | <input type="checkbox"/> Is there any leakage of refrigerant?  | <input type="checkbox"/> Are the terminal screws loosened? |
| <input type="checkbox"/> Is draining smooth?   | <input type="checkbox"/> Is remote controller switch operated? | M3...69-98N×cm (7-10kg×cm)                                 |
| <input type="checkbox"/> Is heat insulation complete (refrigerant and drain piping)? | <input type="checkbox"/> Is there any faulty wiring?           | M4...157-196N×cm (16-20kg×cm)                              |
|  |  | M5...196-245N×cm (20-25kg×cm)                              |

HAND OVER

- Teach the customer the operation and maintenance procedures, using the operation manual (air filter cleaning, temperature control, etc.)
- Refer to installation manual of optional parts (sold separately).

Optional Parts

As for work specifications of the outdoor unit, read the OUTDOOR UNIT INSTALLATION MANUAL attached to the outdoor unit.

ENGLISH

The English text is the original instructions.

Other languages are translation of original instructions.