

Service Manual

Interchangeable Lens for Digital Camera



MEGA
O.I.S.

HD

Model No. **H-HS030PP**

H-HS030E

H-HS030GK



Specifications

Specifications are subject to change without notice.

INTERCHANGEABLE LENS FOR DIGITAL CAMERA "LUMIX G MACRO 30 mm/F2.8 ASPH./MEGA O.I.S."

Focal length
f=30 mm (35 mm film camera equivalent: 60 mm)
Aperture type
7 diaphragm blades/circular aperture diaphragm
Maximum aperture
F2.8
Minimum aperture value
F22
Lens construction
9 elements in 9 groups (1 aspherical lenses)
In focus distance
0.105 m to ∞ [from the focus distance reference line]
Maximum image magnification
1.0× (35 mm film camera equivalent: 2.0×)
Optical image stabiliser
Available
[O.I.S.] switch
None (Setting of the [Stabilizer] is done in [Rec] mode menu by LUMIX digital cameras.)
Mount
"Micro Four Thirds Mount"
Angle of view
40°
Filter diameter
46 mm
Max. diameter
Approx. 58.8 mm
Overall length
Approx. 63.5 mm (from the tip of the lens to the base side of the lens mount)
Mass
Approx. 180 g

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE


There are special components used in this equipment which are important for safety. These parts are marked by  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

TABLE OF CONTENTS

	PAGE	PAGE
1 Service Navigation -----	3	
1.1. Introduction -----	3	
1.2. Important Notice -----	3	
2 Operating Guide -----	4	
2.1. Before Use -----	4	
2.2. Cautions For Use -----	5	
2.3. Components -----	6	
3 Service Fixture and Tools -----	8	
3.1. Service Fixture and Tools -----	8	
3.2. Clean Box -----	8	
4 Disassembly and Assembly Procedure -----	9	
4.1. Outline -----	9	
4.2. Disassembly procedure -----	11	
4.3. Assembly procedure -----	13	
5 Maintenance -----	16	
5.1. Lens Cleaning -----	16	

1 Service Navigation

1.1. Introduction

This service manual contains technical information, which allow service personnel's to understand and service this model.

Please place orders using the parts list and not the drawing reference numbers.

If the circuit is changed or modified, the information will be followed by supplement service manual.

1.2. Important Notice

1.2.1. About LENS MAIN UNIT (Ref. 202)

1. LENS MAIN UNIT (Ref. 202) is not supplied due to difficulty of the transportation issue (Fragile, Dust-free packing), and requires critical lens adjustments.

Therefore, any needs of the "LENS MAIN UNIT" (Ref. 202), carefully confirm its performance in advance.

2. Once "LENS MAIN UNIT" (Ref. 202) is confirmed as defective, place order "LENS UNIT" (Ref. 200) and replace SHADING FRAME (Ref. 206), to maintain Serial number of owner's original lens.

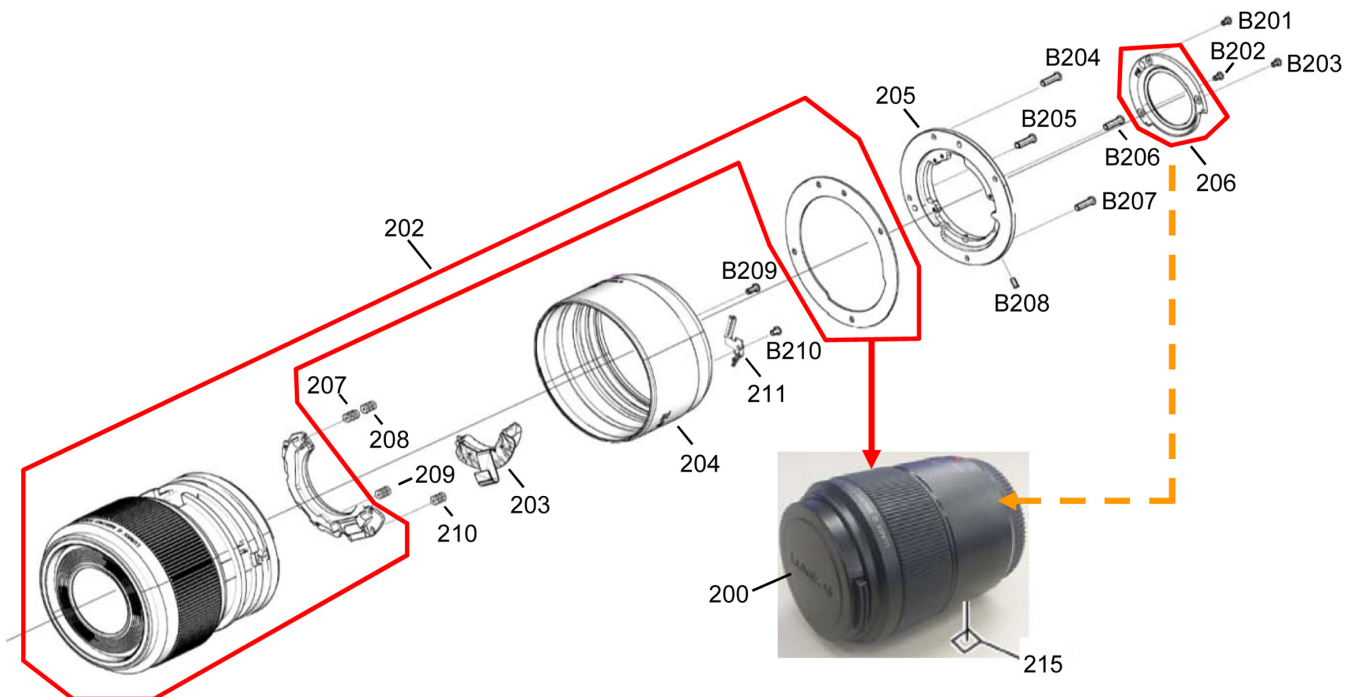


Fig 1-1

3. No adjustment is required when replacing the part mentioned on Fig.1-1. But, when tighten the concerned screws, apply proper torque mentioned on "4. Disassembly and Assembly Instruction" section.

2 Operating Guide

2.1. Before Use

Information for Your Safety

Keep the unit as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games, radio transmitters, high-voltage lines etc.).

- Do not use the camera near cell phones because doing so may result in noise adversely affecting the pictures and sound.
- If the camera is adversely affected by electromagnetic equipment and stops functioning properly, turn the camera off and remove the battery and/or the connected AC adaptor. Then reinsert the battery and/or reconnect the AC adaptor and turn the camera on.


The lens can be used with a digital camera compatible with the lens mount standard for the "Micro Four Thirds™ System".

- It cannot be mounted on the Four Thirds™ mount specification camera.
- The digital camera illustrations in these operating instructions show DMC-GM5 as an example.
- The appearance and specifications of products described in this manual may differ from the actual products you have purchased due to later enhancements.
- Micro Four Thirds™ and Micro Four Thirds Logo marks are trademarks or registered trademarks of Olympus Imaging Corporation, in Japan, the United States, the European Union and other countries.
- Four Thirds™ and Four Thirds Logo marks are trademarks or registered trademarks of Olympus Imaging Corporation, in Japan, the United States, the European Union and other countries.
- G MICRO SYSTEM is an interchangeable lens type digital camera system of LUMIX based on a Micro Four Thirds System standard.
- Other names of systems and products mentioned in these instructions are usually the registered trademarks or trademarks of the manufacturers who developed the system or product concerned.

Precautions

■ Lens Care

- Sand and dust can damage the lens. Make sure that no sand or dust gets inside the lens or the terminals when using the lens on a beach, etc.
- The lens is neither waterproof nor splash-proof. If drops of water get onto the lens, wipe the lens with a dry cloth.
- Do not press the lens with excessive force.
- When there is dirt (water, oil, and fingerprints, etc.) on the surface of the lens, the picture may be affected. Lightly wipe the surface of the lens with a soft, dry cloth before and after taking pictures.
- Do not place the lens mount facing downwards. Do not allow the lens contact points ① to become dirty. (See illustration A)

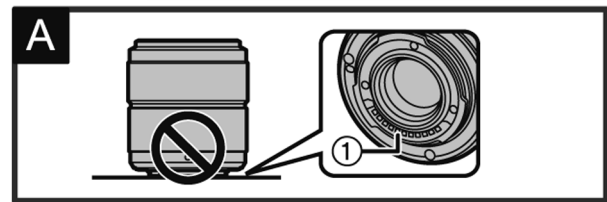

■ About Condensation (Fogging of the Lens)

- Condensation occurs when there are differences in temperature and humidity as described below. Condensation can cause the lens to become dirty and lead to mold and malfunctioning, so exercise caution in the following situations:
 - When the camera is brought indoors from outside during cold weather
 - When the camera is brought into an air-conditioned car
 - When cold air from an air conditioner is directly blown onto the lens
 - In humid places
- Put the camera into a plastic bag to allow it to acclimatize to the surrounding temperature in order to prevent condensation. If condensation occurs, turn the power off and leave it for about two hours. Once the camera acclimatizes to the surrounding temperature the condensation will go away naturally.

2.2. Cautions For Use

Cautions for Use

Take care not to drop or knock the lens. Also take care not to put a lot of pressure on the lens.

- Take care not to drop the bag that you inserted the lens in as it may strongly shock the lens. The camera may stop operating normally and pictures may no longer be recorded. Also, the lens may be damaged.

When using pesticides and other volatile substances around the camera make sure that they do not get onto the lens.

- If such substances get onto the lens they can damage the exterior case or cause the paint to peel.

Do not carry the unit when it is still attached to the camera body.

- Under no circumstances should the unit be stored in any of the following locations since doing so may cause problems in operation or malfunctioning.
 - In direct sunlight or on a beach in summer
 - In locations with high temperatures and humidity levels or where the changes in temperature and humidity are acute
 - In locations with high concentrations of sand, dust or dirt
 - Where there is fire
 - Near heaters, air conditioners or humidifiers
 - Where water may make the unit wet
 - Where there is vibration
 - Inside a vehicle
- Refer also to the operating instructions of the digital camera.
- When the unit is not going to be used for a prolonged period, we recommend storing with a desiccant (silica gel). Failure to do so may result in performance failure caused by mold, etc. It is recommended that you check the unit's operation prior to use.
- Do not leave the lens in contact with rubber or plastic products for extended periods of time.
- Do not touch the lens contact point. Doing so can cause failure of the unit.
- Do not disassemble or alter the unit.

Do not use benzine, thinner, alcohol or other similar cleaning agents to clean the lens glass or exterior cabinet.

- Using solvents can damage the lens or cause the paint to peel.
- Wipe off any dust or fingerprints with a soft, dry cloth.
- Use a dry, dust cloth to remove dirt and dust on the focus ring.
- Do not use a household detergent or a chemically treated cloth.

Troubleshooting

A sound is heard when the camera is turned on or off.


- This is the sound of lens or aperture movement and is not a malfunction.

When this lens is attached to digital camera, stabiliser function cannot be turned off or stabiliser function does not work.

- The Optical Image Stabiliser function of this lens only works correctly with supported cameras.
 - When older Panasonic digital cameras (DMC-GF1, DMC-GH1, DMC-G1) are used, [Stabilizer] in the [Rec] mode menu cannot be set to [OFF]. It is recommended to update the firmware of the digital camera at the following website.
<http://panasonic.jp/support/global/cs/dsc/download/>
 - When using this lens with another make of digital cameras, contact the respective company about details.

2.3. Components

Names and Functions of Components

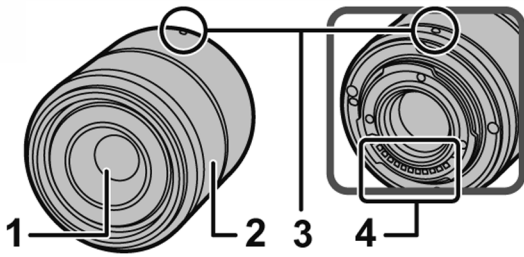

- 1 Lens surface
- 2 Focus ring
Rotate to focus when taking pictures with manual focus (MF).
- 3 Lens fitting mark
- 4 Contact points

Note

- When flash recording with a close subject, the light of the flash will be blocked by the lens and part of the picture may be dark. Check the distance from the subject when recording.

2.3.1. Accessories



- 1 Lens Pouch
- 2 Lens Cap
- 3 Lens Rear Cap

(The lens rear cap and lens cap are attached to the interchangeable lens at the time of purchase.)

2.3.2. Attaching/Detaching the Lens

- Refer also to the camera's operating instructions for attaching and detaching the lens.
- Check that the camera is turned off.
- Remove the lens rear cap from the lens. (See illustration 1)

■ Attaching the Lens (See illustration 2)

Align the lens fitting marks (A) on the camera body and the lens and then rotate the lens in the direction of the arrow until it clicks.

- Do not press the lens release button (B) when you attach a lens.
- Do not try to attach the lens when holding it at an angle to the camera body as the lens mount may get scratched.
- Check that the lens is attached correctly.


■ Detaching the Lens (See illustration 3)

While pressing on the lens release button (B), rotate the lens toward the arrow until it stops and then remove.

- When rotating the lens, hold (C), the portion near the base of the lens.
- Attach the lens rear cap so that the lens contact point does not get scratched.
- Attach the body cap to the camera so no dirt or dust will get inside the main unit.

■ Attaching Filters

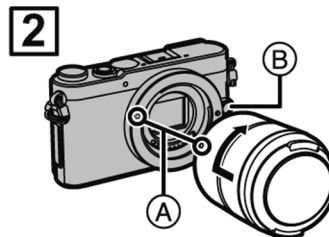


- Vignetting may occur if using 2 or more MC protectors (optional: DMW-LMC46), PL filters (optional: DMW-LPL46) or ND filters (optional: DMW-LND46), or if using thick protectors and/or filters.
- The filter may become impossible to remove if excessively tightened, so please refrain from tightening it too strongly.
- It is possible to attach the lens cap with the filter already attached.
- You cannot attach a conversion lens or adaptor to this lens. A filter may be used, but attaching any other element may cause damage to the lens.



3 Service Fixture and Tools

3.1. Service Fixture and Tools

The following Service Fixture and Tools are used for Checking & Servicing for this unit.


Lens Cleaning Kit (BK) VFK1900BK	TORQUE DRIVER RFKZ0456	Driver VFK1390
 * Only supplied as 10 set/box.	 Spec.:2-30N・cm (Equiv.0.2-3kgf/cm)	

3.2. Clean Box

- The repair quality is considered, and it is recommended working in the environment of satisfied clean level less than class 10,000 (Federal Standard 209D).

[NOTE]

- Work in the environment of satisfied clean level less than class 10,000 (Federal Standard 209D) when cleaning the inside of a lens.

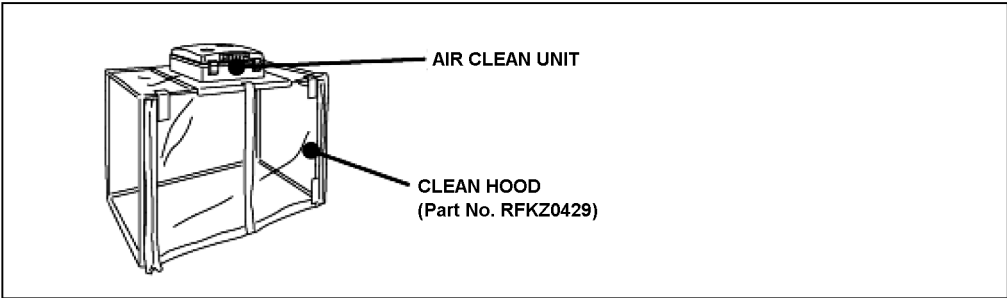

4 Disassembly and Assembly Procedure

4.1. Outline

It is recommended dealing with clean box, to keep maintaining the dustproof environment.

(Refer to "3.2. Clean Box" section of this service manual for details.)

Important:

1. When servicing the enclosure part (refer to Fig. W1), it must be performed inside of satisfied clean level.
(Satisfied clean level: Less than class 10,000 (Federal Standard 209D))
As for procedure, refer to the "5 Maintenance" for details.
2. To minimize the possibilities/risk of getting the dust/dirt on the lens surface, keep covering the lens unit with lens caps (front & rear), other than necessary cases.
3. Do not touch the surface of the lens glasses with your fingers.
4. Blow off the dust on the surface of the lens with a blower brush.
5. Use lens cleaning KIT (BK)(VFK1900BK).


Proceed disassemble/assemble, by referring the following table and Fig. W1.

NOTE:

1. When installing the screws, be sure to use the torque driver (RFKZ0456) and tighten the screws with specified torque, mentioned on the following table.
2. Use small driver (VFK1390) when removing/tightening B208.

Interchangeable Lens (H-HS030)

Caution :							
Keep covering the lens unit with Lens caps (front & rear) other than necessary cases.							
Concerned parts		Screws					Remarks
Part name	Ref. No.	Ref. No.	Color	Length (mm)	Order	Torque value	
SHADING FRAME	206	B201	Black	2.5 mm	1	6.9±0.7N·cm	
		B202	Black	2.5 mm	2	6.9±0.7N·cm	
		B203	Black	2.5 mm	3	6.9±0.7N·cm	
L MOUNT UNIT	205	B204	Silver	7.0 mm	1	21.6±2.2N·cm	
		B205	Silver	7.0 mm	4	21.6±2.2N·cm	
		B206	Silver	7.0 mm	3	21.6±2.2N·cm	
		B207	Silver	7.0 mm	2	21.6±2.2N·cm	
MOUNT CONTACT UNIT	203	B208	Silver	3.5 mm	-	-	Use Small Driver (VFK1390).
REAR FRAME UNIT	204	B209	Silver	4.0 mm	-	11.8±1.2N·cm	
EARTH PLATE	211	B210	Silver	2.5 mm	-	11.8±1.2N·cm	

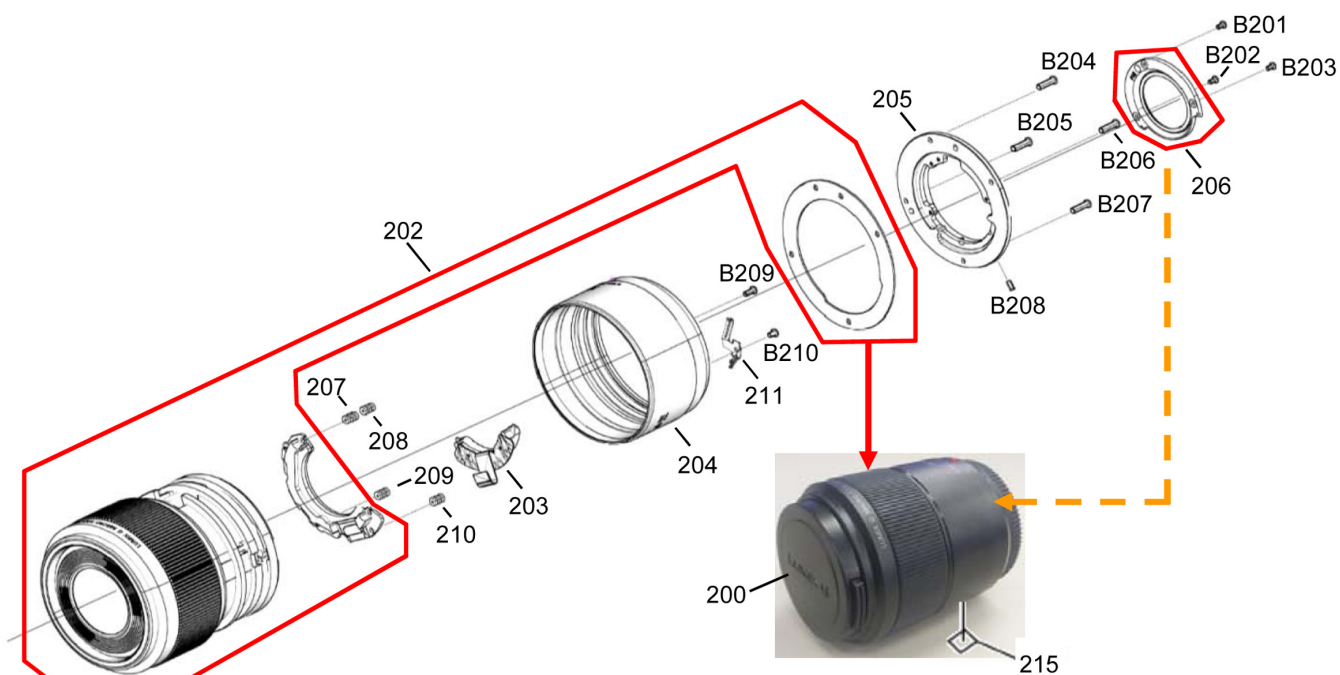

*It must be performed inside of satisfied clean level.
 (Satisfied clean level : Less than class 10,000 Federal Standard 209D)

(Fig. W1)


4.2. Disassembly procedure

Important:

It must be performed inside of satisfied clean level.
(Satisfied clean level: Less than class 10,000 (Federal Standard 209D))


4.2.1. Removal of the Shading frame

1. Remove the 3 screws (A).

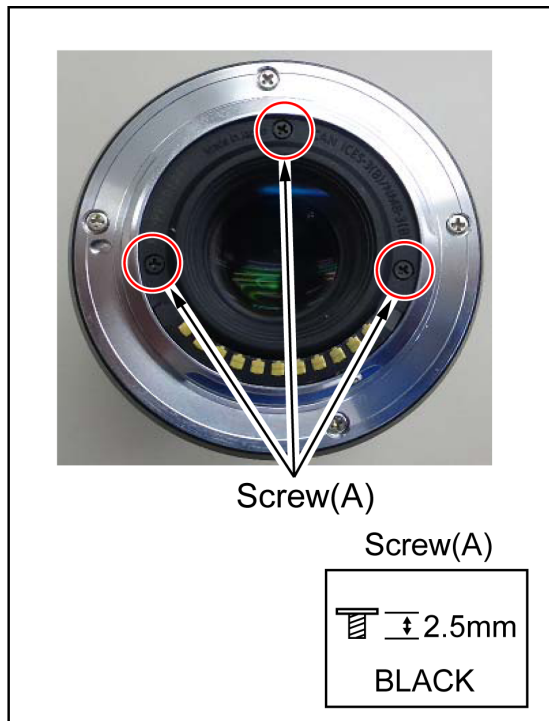


4.2.2. Removal of the L mount unit

1. Remove 1 screw (B) and 4 screws (C).

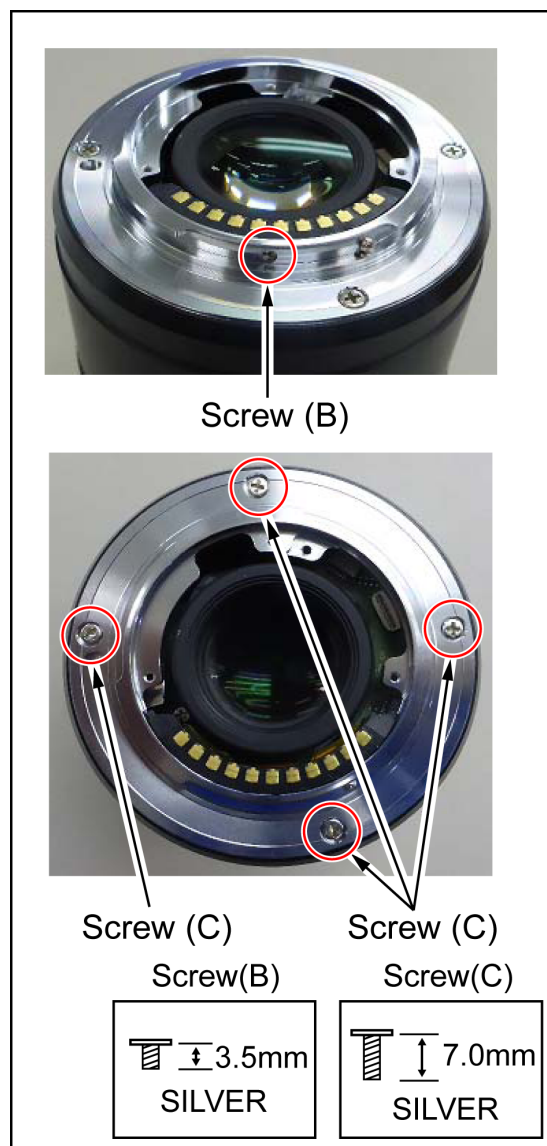


4.2.3. Removal of the Mount washer

1. Removing the Mount washer by getting it up.

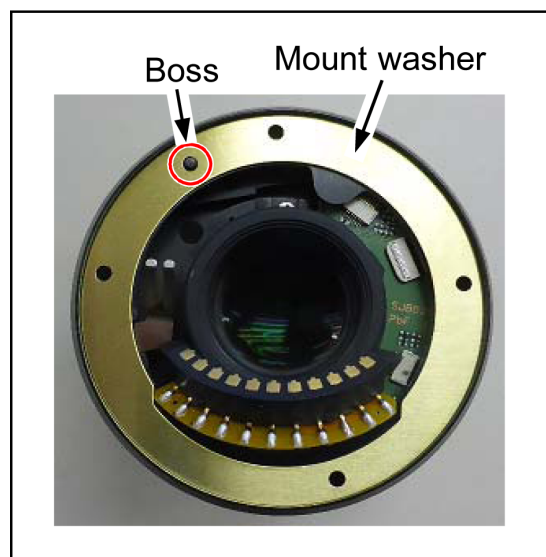


4.2.4. Removal of the Rear frame unit

1. Remove 1 screw (D).

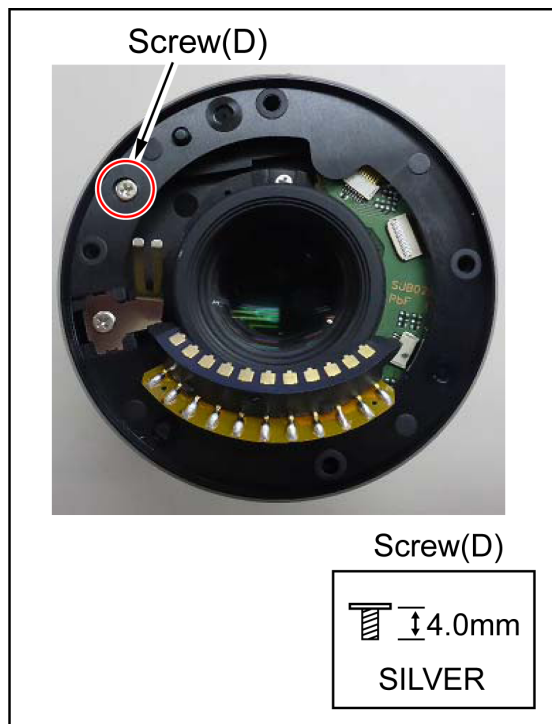


4.2.5. Removal of the Earth plate

1. Remove 1 screw (E).

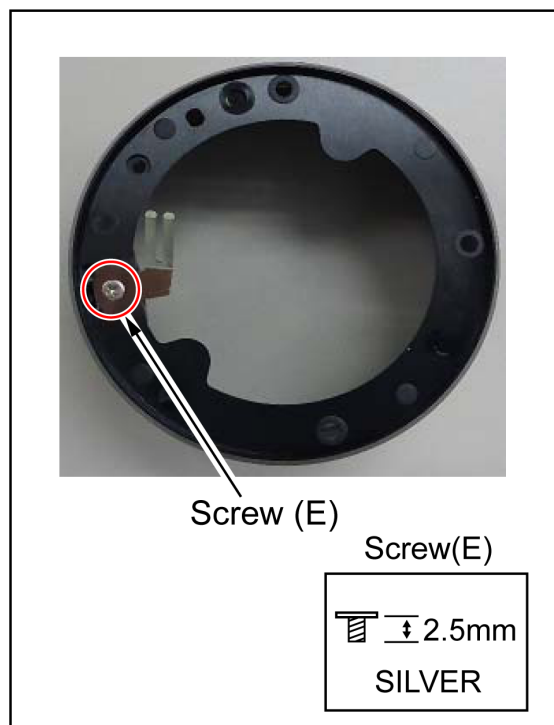

4.2.6. Removal of the Lens P.C.B. unit and the Mount contact unit

1. Disconnect 4 connectors.

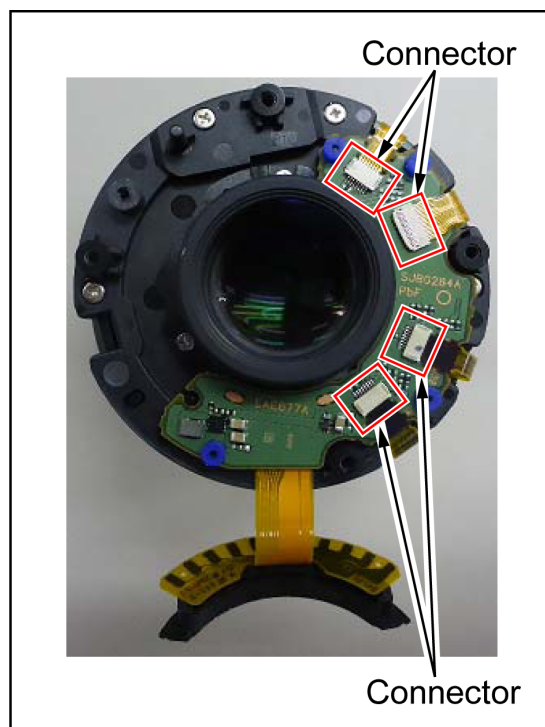

4.2.7. Removal of the Mount contact unit

1. Disconnect 1 connector.



4.3. Assembly procedure

Important:

When tightening the screw, use a torque driver (RFKZ0456) by ordering the screwing order with specified torque described in each step.


4.3.1. Installation of the Mount contact unit

1. Connect FPC to 1 connector.




4.3.2. Installation of the Lens P.C.B.unit and the Mount contact unit

1. Connect FPCs to 4 connectors.

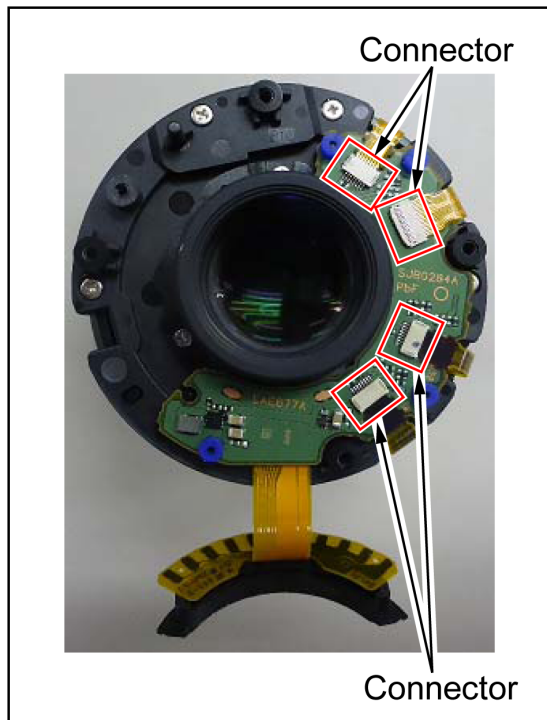


4.3.3. Installation of the Earth plate

1. Tighten 1 screws (E) by using the torque driver with specified torque.
(Torque Driver : RFKZ0456)
(Torque : $11.8 \pm 1.2 \text{ N} \cdot \text{cm}$)

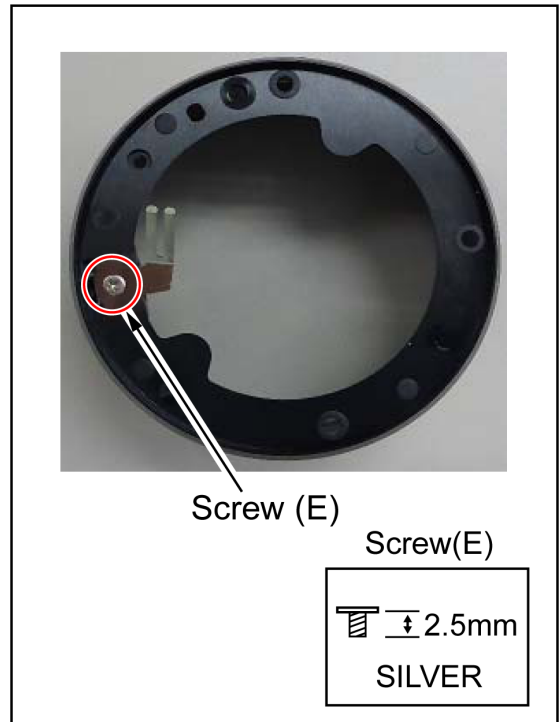


4.3.4. Installation of the Rear frame unit

1. Tighten 1 screws (D) by using the torque driver with specified torque.
(Torque Driver : RFKZ0456)
(Torque : $11.8 \pm 1.2 \text{ N} \cdot \text{cm}$)

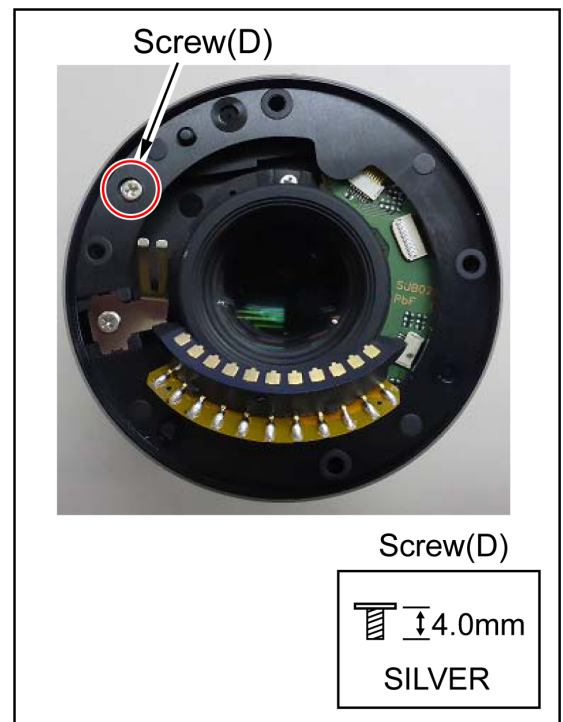


4.3.5. Installation of the Mount washer

1. Install the Mount washer.

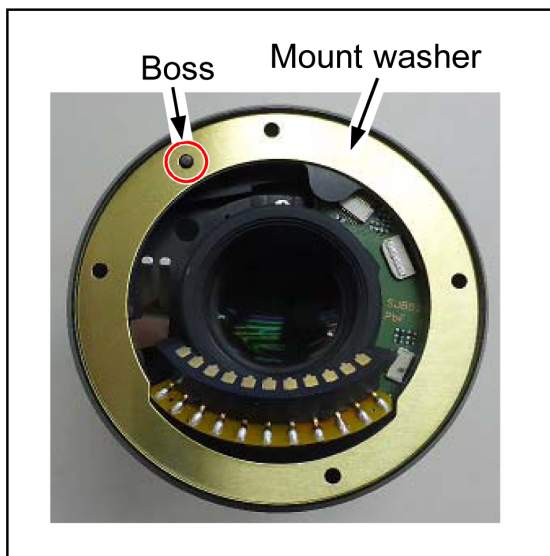

4.3.6. Installation of the L mount unit

1. Tighten 4 screws (C) in numerical order by using the torque driver with specified torque.
(Torque Driver : RFKZ0456)
(Torque : $21.6 \pm 2.2 \text{ N} \cdot \text{cm}$)
And, tighten 1 screw (B) by using the small driver.

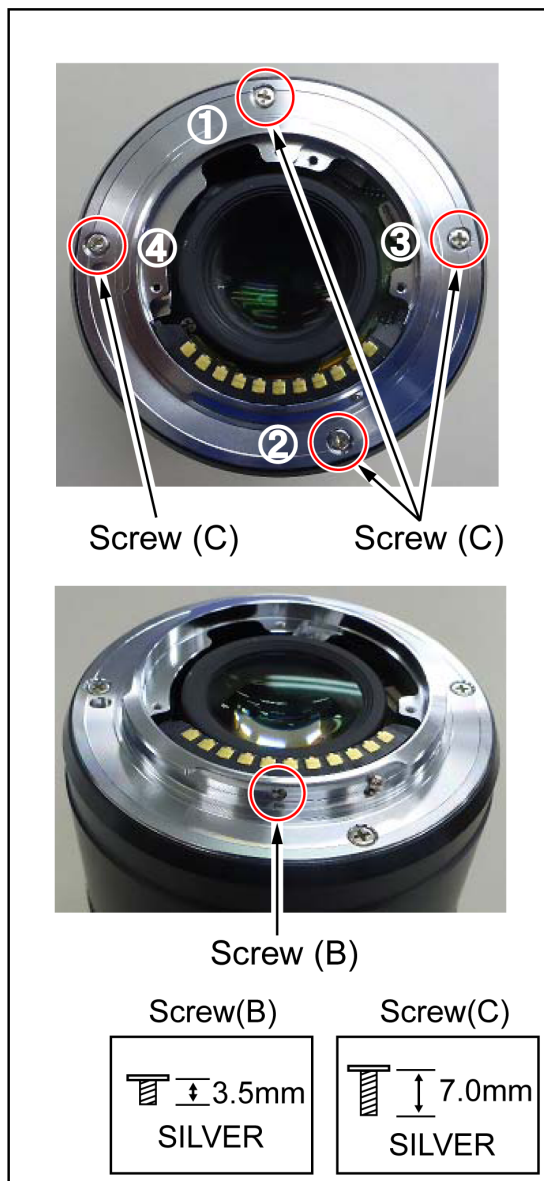


4.3.7. Installation of the Shading frame

1. Tighten 3 screws (A) in numerical order by using the torque driver with specified torque.

(Torque Driver : RFKZ0456)

(Torque : $6.9 \pm 0.7 \text{ N} \cdot \text{cm}$)

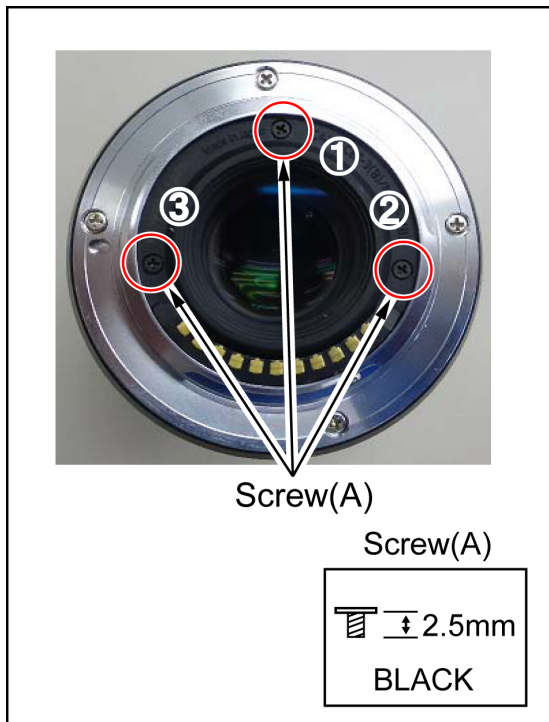

5 Maintenance

5.1. Lens Cleaning

5.1.1. Dust / Dirt on the outer casing part(s)

1. Blow off the dust first, then sweep out the dust from narrower spaces with soft cleaning brush.
2. Wipe up the Outer casing part with the dry fuzz-free cloth.

5.1.2. Dust / Dirt on the Lens Glasses.

Define the location of the dust / dirt first, whether it is outside lens surface or not.

1. When it is outside surface of the lens

When the dust and / or dirt gets on the outer side surface of the Lens glasses, order the following procedures.

- a. Blow off the dust on the Lens glass surface with the Blower, gently. (Do not Blow too strongly.)
- b. Wipe out the dirt on the lens glass surface with Lens cleaning KIT (VFK1900BK) if necessary.

(Consult the Instruction sheet which is included in the Lens cleaning KIT in details.)

